



## INSPECTION

### INSPECT LOWER SUSPENSION ARM BALL JOINT FOR ROTATION CONDITION

- As shown, flip the ball joint stud back and forth 5 times, before installing the nut.
- Using a torque wrench, turn the nut continuously one turn each 2–4 seconds and take the torque reading on the 5th turn.

#### Turning torque:

**0.5 – 3.5 N·m (5 – 36 kgf·cm, 5 – 31 in.-lbf)**