

INSTALLATION

Installation is in the reverse order of removal (See page [SA-28](#)).

AFTER INSTALLATION, CHECK ABS SPEED SENSOR SIGNAL (See page [DI-408](#) or [DI-461](#)) AND FRONT WHEEL ALIGNMENT (See page [SA-4](#))