


REPLACEMENT

1. REMOVE BUSHING

Using SST and a deep socket wrench, remove the bushing.

SST 09223-00010

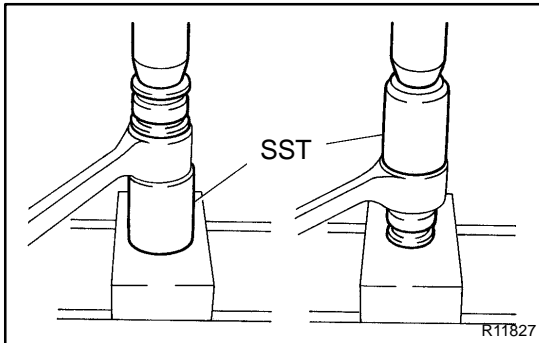

2. INSTALL NEW BUSHING

Using SST and a deep socket wrench, install a new bushing.

SST 09223-00010

NOTICE:

Do not apply grease or oil to the bushing.