


FRONT WHEEL HUB BOLT REPLACEMENT

SA0WY-01


1. REMOVE FRONT WHEEL
2. REMOVE FRONT BRAKE CALIPER AND DISC
(See page [SA-12](#))

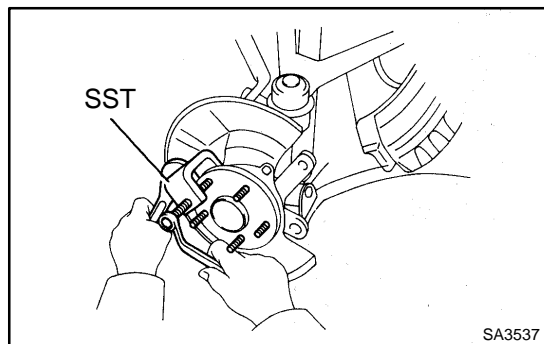

3. REMOVE HUB BOLT

Using SST, remove the hub bolt.

SST 09628-10011

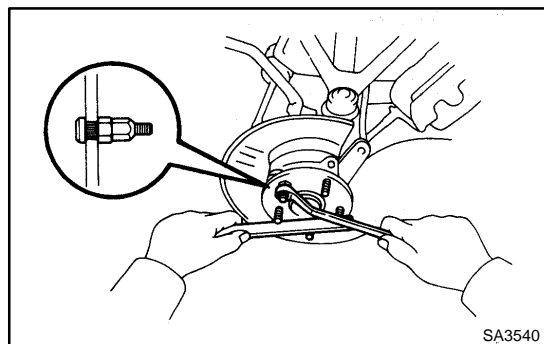

4. INSTALL HUB BOLT

Install a washer and nut to the bolt, as shown in the illustration, and install a new hub bolt by torquing the nut.

5. INSTALL FRONT DISC AND BRAKE CALIPER
6. INSTALL FRONT WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)