


DISASSEMBLY

1. REMOVE DUST DEFLECTOR

Using a screwdriver, remove the dust deflector.

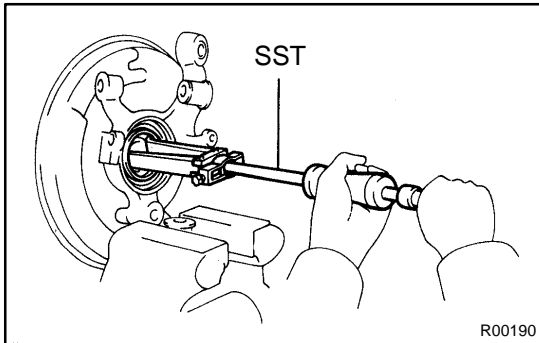

2. REMOVE OIL SEAL (INSIDE)

- (a) Mount the axle carrier in a vise.

HINT:


Use a set of soft jaws in the vise to protect the axle carrier.

NOTICE:

Do not tighten the vise too tight.

- (b) Using SST, remove the oil seal.

SST 09308-00010

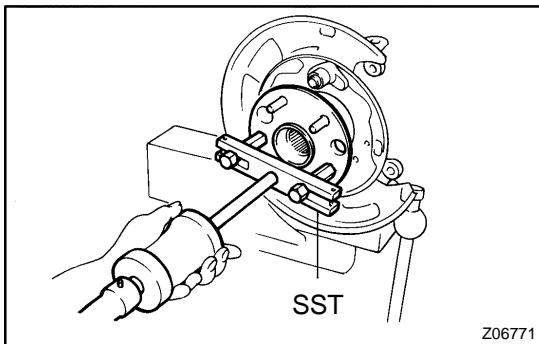


3. REMOVE AXLE HUB FROM AXLE CARRIER

- (a) Using SST, remove the axle hub.


SST 09520-00031

- (b) Remove the backing plate.

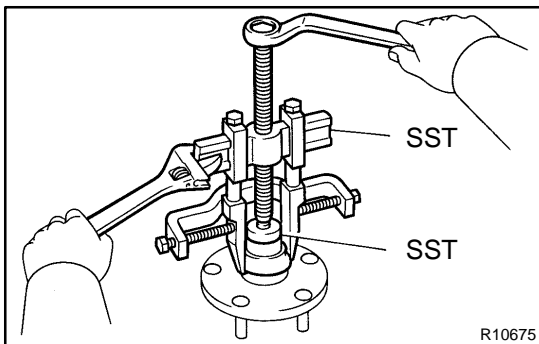

- (c) Using SST, remove the inner race (outside) from the axle hub.


SST 09950-40010 (09951-04010, 09952-04010, 09953-04020, 09954-04010, 09955-04010, 09957-04010, 09958-04010), 09950-60010 (09951-00420)

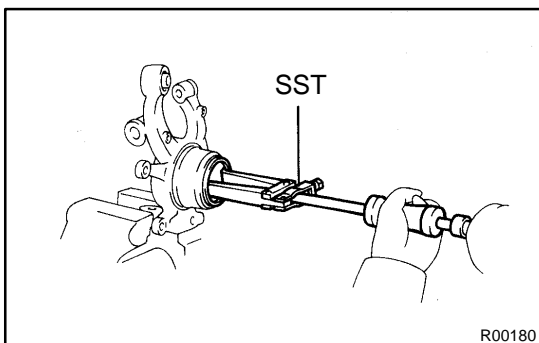

4. REMOVE OIL SEAL (OUTSIDE)

Using SST, remove the oil seal.

SST 09308-00010

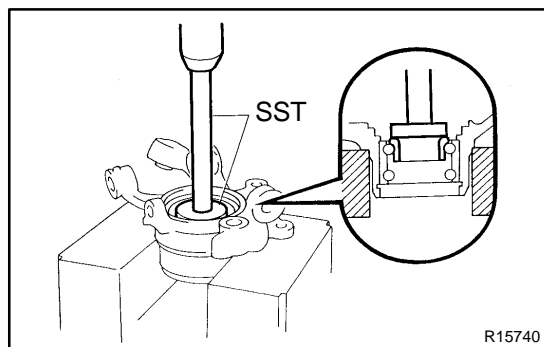**5. REMOVE BEARING**

- (a) Using snap ring pliers, remove the snap ring.
- (b) Temporarily install the inner race (inside) to the bearing.
- (c) Using SST and a press, remove the bearing.

SST 09950-60010 (09951-00560),
09950-70010 (09951-07150)