

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-42](#)).

**AFTER INSTALLATION, CHECK ABS SPEED SENSOR SIGNAL (See page [DI-408](#) or [DI-461](#)) AND REAR WHEEL ALIGNMENT (See page [SA-8](#))**