


DISASSEMBLY

REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Install the 2 nuts and a bolt to the bracket at the lower portion of the shock absorber shell and secure it in a vise.
- (b) Using SST, compress the coil spring.
SST 09727-30021

NOTICE:

Do not use an impact wrench. It will damage the SST.

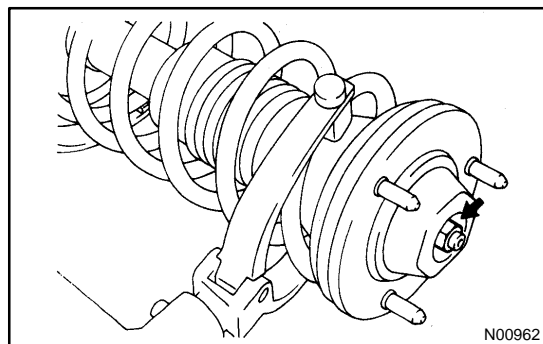

- (c) Remove the suspension support nut.
- (d) Remove these parts from the shock absorber:
 - Suspension support
 - Coil spring
 - Insulator
 - Spring bumper