


REMOVAL

1. **DISCONNECT TAILPIPE**
2. **REMOVE BOTH SIDE STABILIZER BAR LINKS**

Remove the 4 nuts and 2 stabilizer bar links.

Torque: 74 N·m (750 kgf-cm, 54 ft-lbf)

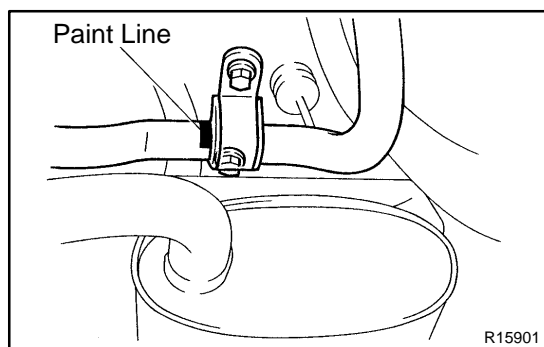

3. **REMOVE STABILIZER BAR**

Remove the 4 bolts and stabilizer bar with the 2 brackets and 2 bushings.

Torque: 28 N·m (290 kgf-cm, 21 ft-lbf)

4. **REMOVE BOTH SIDE BUSHINGS AND BRACKETS**

HINT:

At the time of installation, install the bushing to the outside of the paint line.