


REAR WHEEL HUB BOLT REPLACEMENT


1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE CALIPER AND DISC
(See page [BR-34](#))

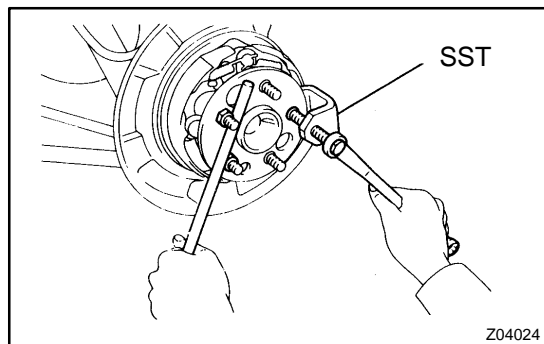

3. REMOVE HUB BOLT

Using SST, remove the hub bolt.

SST 09628-10011

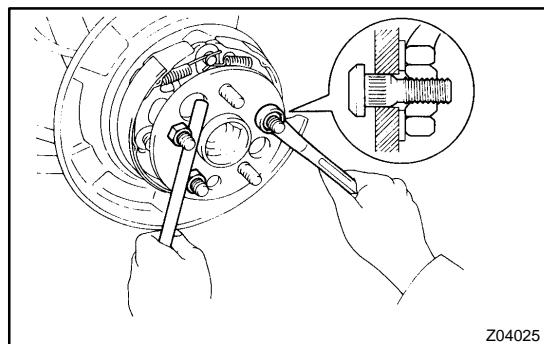

4. INSTALL HUB BOLT

Install a washer and nut to the hub bolt, as shown in the illustration, and install the hub bolt by torquing the nut.

5. INSTALL DISC AND BRAKE CALIPER

6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)