



REMOVAL

1. REMOVE V-BANK COVER

2. REMOVE FUEL PRESSURE PULSATION DAMPER

- Remove the pulsation damper and upper gasket.
- Disconnect the fuel inlet hose from the delivery pipe, and remove the lower gasket.

CAUTION:

- Put a shop towel under the delivery pipe.
- Slowly loosen the pulsation damper.