


## INSPECTION

### 1. INSPECT FUEL PUMP RESISTANCE

Using an ohmmeter, measure the resistance between terminals.

**Resistance: 0.2 – 3.0  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the fuel pump and/or set plate.

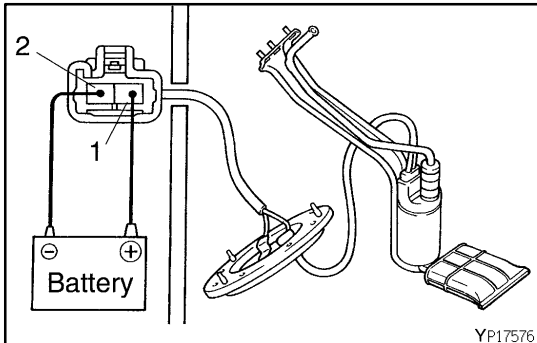

### 2. INSPECT FUEL PUMP OPERATION

Connect the positive (+) lead from the battery to terminal 1 of the connector, and the negative (–) lead to terminal 2. Check that the fuel pump operates.

#### NOTICE:

- These tests must be performed quickly (within 10 seconds) to prevent the coil from burning out.
- Keep the fuel pump as far away from the battery as possible.
- Always connect or disconnect at the battery.

If operation is not as specified, replace the fuel pump and/or set plate.