

DISASSEMBLY

NOTICE:

When using a vise, do not overtighten it.

1. REMOVE IGNITION KEY CYLINDER ILLUMINATION

Remove the screw.

2. REMOVE SLIDING YOKE

(See page SR-13)

3. REMOVE LOWER DUST COVER

(See page SR-13)

4. REMOVE TELESCOPIC SENSOR PLATE

Remove the bolt.

5. REMOVE TILT POSITION SENSOR

Remove the screw.

6. REMOVE TELESCOPIC POSITION SENSOR

(a) Disconnect the connector.

(b) Remove the 2 screws.

7. REMOVE TURN SIGNAL BRACKET

Remove the 3 screws.

8. REMOVE NO. 1 PROTECTOR AND NO. 2 PROTECTOR

Remove the 4 bolts.

9. REMOVE CONNECTOR BRACKET

Remove the 2 bolts.


10. REMOVE COLUMN UPPER BRACKET

(See page SR-13)

11. REMOVE TILT STEERING GEAR ASSEMBLY WITH MOTOR

(a) Remove the 2 stopper nuts, 2 springs and spacer.

(b) Remove the bond cable with screw.

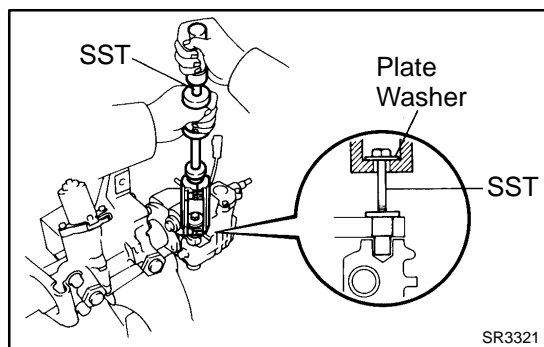

(c) Set SST and plate washer (36 mm outer diameter), as shown, and then remove the 2 tilt steering No.2 bolts.


SST 09213-54015 (09214-00030)

09910-00015 (09911-00011, 09912-00010)

(Reference) Plate washer: 90201-10201

(d) Remove the tilt steering gear assembly with motor.

(e) Remove the 2 bushings and support stopper bolts from the tilt steering gear assembly with motor.

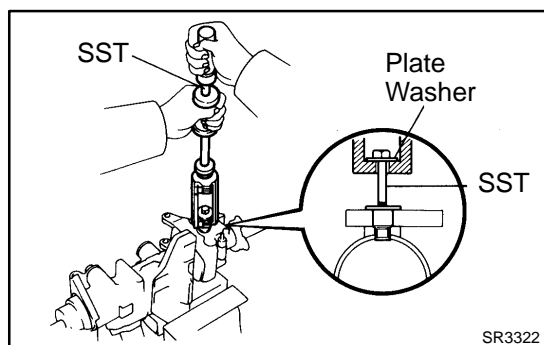

12. REMOVE COLUMN UPPER TUBE WITH MAIN SHAFT

(a) Set SST and plate washer (36 mm outer diameter), as shown, and then remove the 2 tilt steering No.1 bolts and bushings.

SST 09213-54015 (09214-00030)

09910-00015 (09911-00011, 09912-00010)


(Reference) Plate washer: 90201-10201

(b) Using a snap ring expander, remove the snap ring from the main shaft.

- (c) Remove the column upper tube with main shaft from the tilt steering housing support.

13. REMOVE TILT STEERING HOUSING SUPPORT

Remove the 4 bolts.

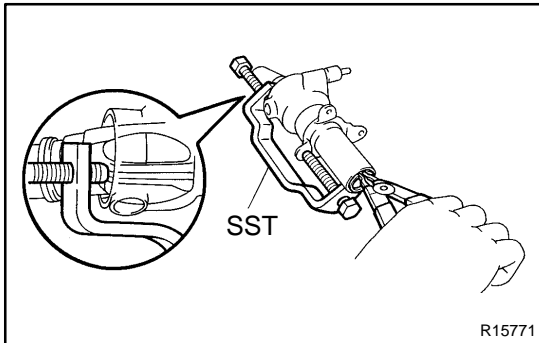**14. REMOVE MAIN SHAFT**

- (a) Using SST, compress the compression spring.
SST 09950-40011 (09958-04010)
- (b) Using a snap ring expander, remove the snap ring.
- (c) Remove the main shaft from the column upper tube.
- (d) Remove the compression spring, thrust collar and bearing.