



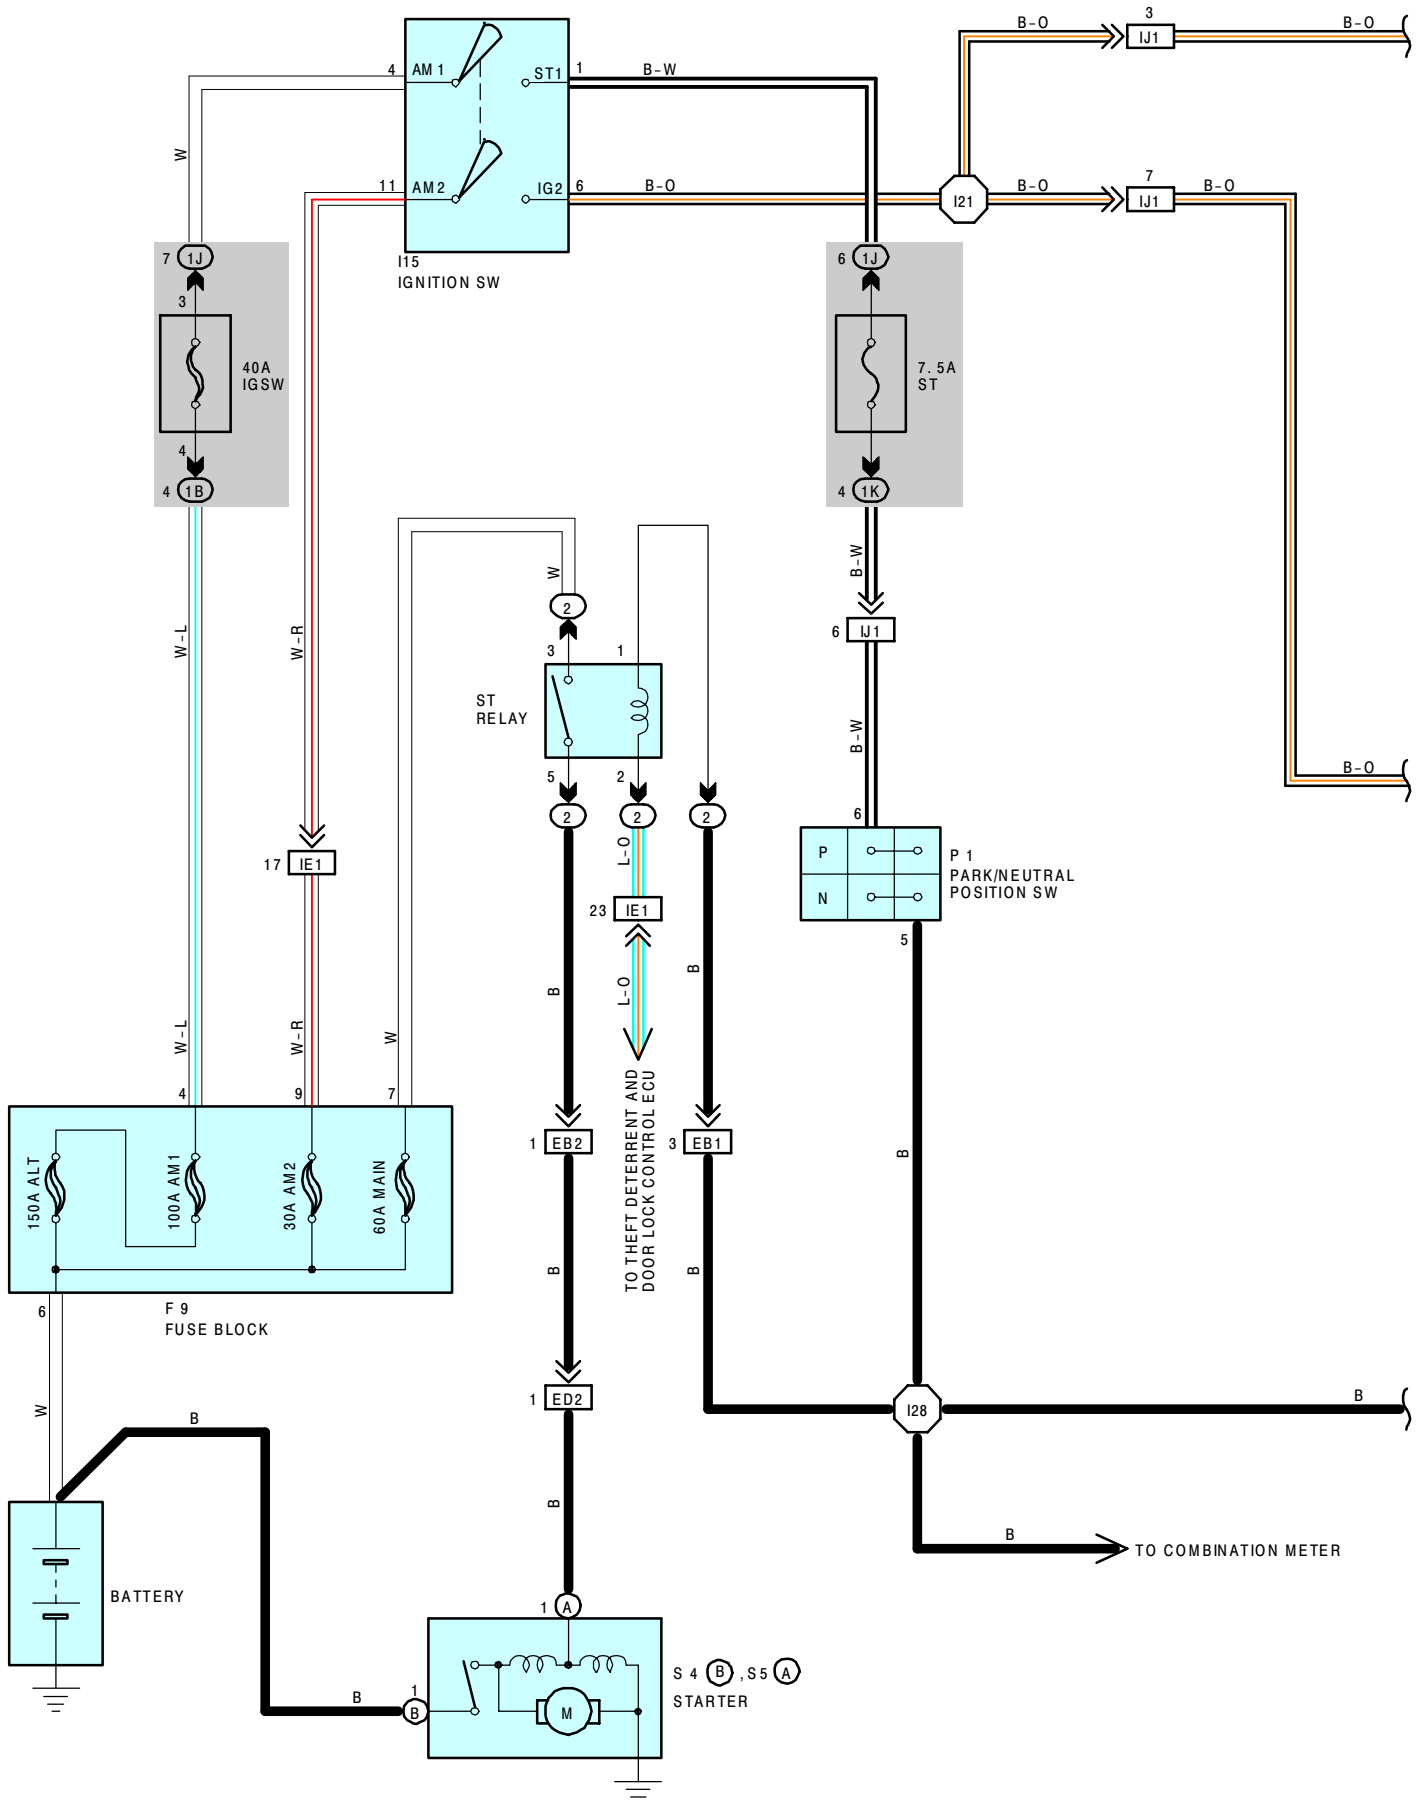

STARTING AND IGNITION (1UZ-FE)

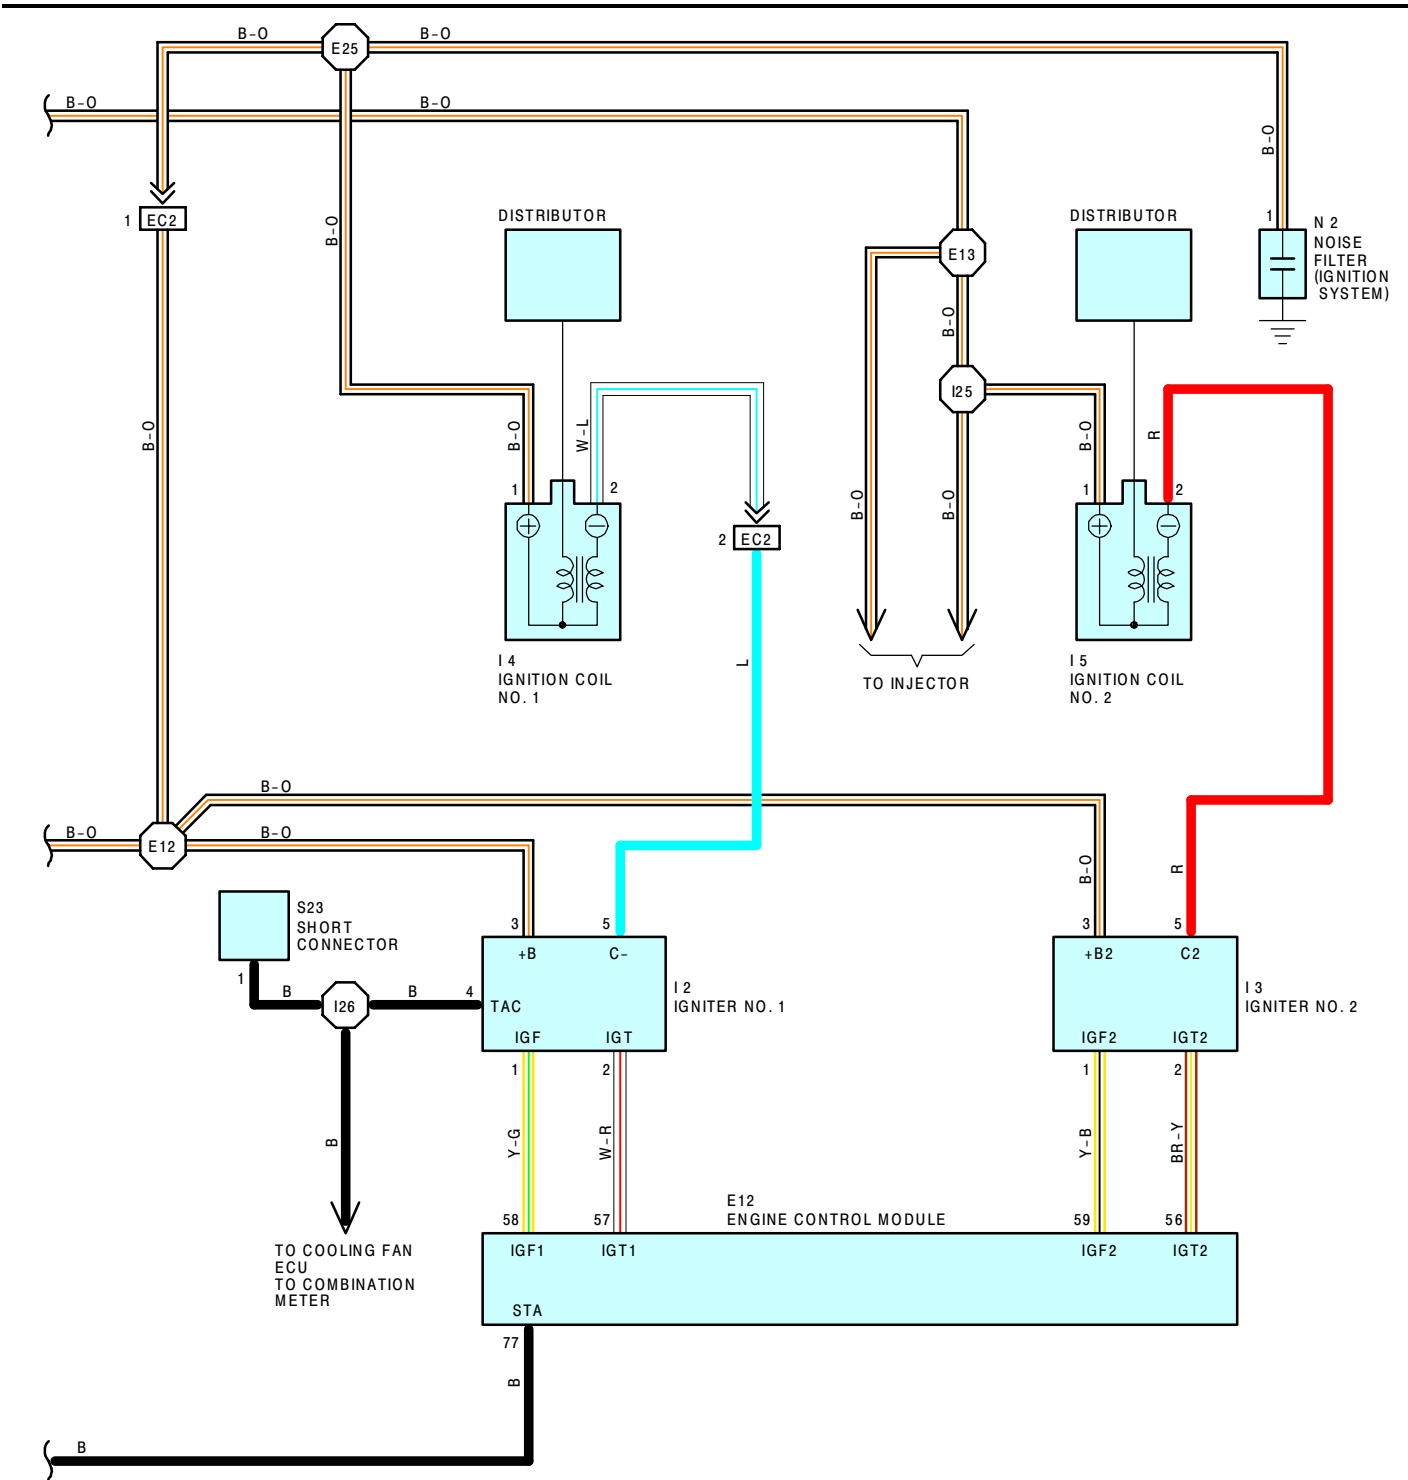





STARTING AND IGNITION (1UZ-FE)

SERVICE HINTS

I15 IGNITION SW

- 4-1 : CLOSED WITH IGNITION SW AT **ST** POSITION
- 11-6 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

P 1 PARK/NEUTRAL POSITION SW

- 6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

S 4 (B), S 5 (A) STARTER

- POINTS CLOSED WITH PARK/NEUTRAL POSITION SW ON AND IGNITION SW AT **ST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
E12	30	I 4	27	P 1	27
F 9	26	I 5	27	S 4 B	27
I 2	27	I15	31	S 5 A	27
I 3	27	N 2	27	S23	31

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	36 (1UZ-FE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2)
EB2		
EC2	36 (1UZ-FE)	ENGINE WIRE AND ENGINE NO. 4 WIRE (FRONT SIDE OF CYLINDER HEAD COVER LH)
ED2	36 (1UZ-FE)	ENGINE NO. 2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IJ1	40	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	36 (1UZ-FE)	ENGINE WIRE	I25	42	ENGINE WIRE
E13			I26		
E25			I28		
I21	42	COWL WIRE			


E12 DARK GRAY

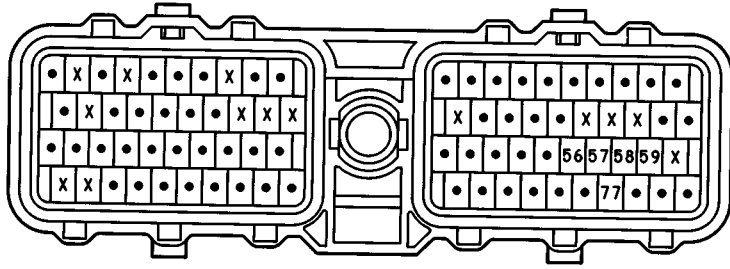


F 9

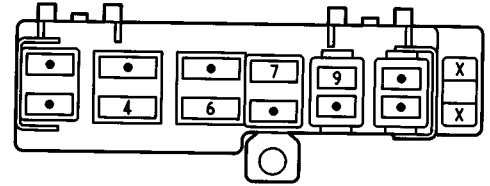


I 2 BLACK

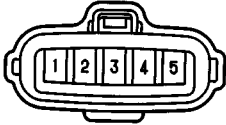


I 3 BLACK

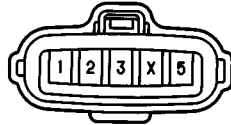

I 4, I 5 BLACK

 


I15

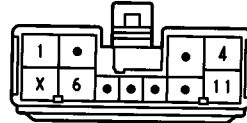


N 2 GRAY



P 1 GRAY

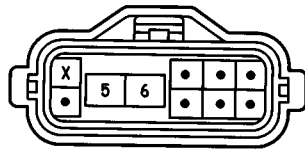

S 4 (B)

 

S 5 (A) BLACK



S23

