

Vehicle Wiring Information

for the
1998 Lexus GS 400

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|---------------------|-----|-----------------------------|
| 12V | white/blue | + | ignition harness |
| STARTER | black | + | ignition harness |
| IGNITION | black/yellow | + | ignition harness |
| SECOND IGNITION | black/white | + | ignition harness |
| ACCESSORY | blue/yellow | + | ignition harness |
| POWER LOCK | see direct fax | | |
| POWER UNLOCK | document #1070 | | |
| LOCK MOTOR | green/red | + | drivers door module *1 |
| UNLOCK MOTOR | green/black | + | drivers door module *1 |
| DISARM DEFEAT | green/black | + | passengers door module *2 |
| PARKING LIGHTS + | green | | bottom right of fuse panel |
| PARKING LIGHTS - | red/yellow | | under steering column |
| HEADLIGHTS | red/black | - | under steering column |
| DOOR TRIGGER | green *3 | - | *4 |
| DOVE SUPERVISION | green | - | *4 |
| TRUNK/HATCH PIN | red/white | - | drivers kick in 20 pin plug |
| HOOD PIN | violet/green | - | pass kick in 25 pin plug |
| TRNK/HTCH RELEASE | vio/yel or blue *6 | -/+ | *5 |
| FCTRY ALARM ARM | arms with lock | | |
| FCTRY ALRM DISARM | disarms with unlock | | |
| DISARM NO UNLOCK | lt.green/black | - | drivers kick in 18 pin plug |
| TACHOMETER | black/yellow | | 28 pin plug, pin #16 *7 |
| SPEED SENSE | red/blue | | 17 pin plug, pin #11 *7 |
| BRAKE WIRE | green/white | + | drivers kick in 20 pin plug |
| HORN TRIGGER | green/black | - | steering column or *8 |
| WIPERS | blue/red - blue/blk | + | steering column, 9 pin plug |
| LF WINDOW UP/DN | red - green | A | drivers door module |
| RF WINDOW UP/DN | red - green | A | passengers door module |
| LR WINDOW UP/DN | not recommended | | |
| RR WINDOW UP/DN | not recommended | | |
| SUN RF OPN/CLOSE | not recommended | | |

Notes:

NOTE: This vehicle has an immobilizer system that needs to be bypassed when adding remote start. Use DEI part number 555U or 555F. *1 The drivers door module is located in the drivers door. *2 The passengers door module is located in the passengers door. *3 To beat the dome light delay, go to each door module located in each door. The wires are : red/white for drivers door, red/green for front right door, red/white for left rear door, and red/yellow for right rear door. *4 Dome light supervision wire is located in a 25 pin plug pin #13 behind the fuse panel in the passenger kick at the body ECU. *5 Violet/yellow(-) is at the switch or the blue(+) at the drivers kick in a 18 pin plug. *6 Fuel door lid is a blue/white(+) at the switch or at a 20 pin plug, pin #16 in the drivers kick. *7 Located inside ECU box which is under hood on the drivers side. *8 Horn is a green/black in a blue 13 pin plug in the drivers kick.

(c) 1994-2002 Directed Electronics, Inc. All Rights Reserved

IMPORTANT: This wiring information is being provided free of charge on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it using a digital multimeter.

Directed Electronics, Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer.

DEI assumes no liability or responsibility resulting from an improper installation, even in reliance upon this information.