


INJECTOR

ON-VEHICLE INSPECTION

SF0RY-01

1. REMOVE V-BANK COVER
2. REMOVE BATTERY CLAMP COVER AND AIR CLEANER INLET
3. REMOVE INTAKE AIR CONNECTOR

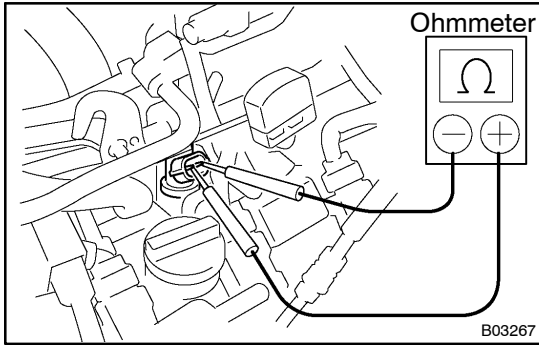

4. INSPECT INJECTOR RESISTANCE

- (a) Disconnect the 8 injector connectors.
- (b) Using a ohmmeter, measure the resistance between the terminals.

Resistance:

13.4 – 14.2 Ω at 20°C (68°F)

If the resistance is not as specified, replace the injector.

- (c) Reconnect the 8 injector connectors.
5. REINSTALL INTAKE AIR CONNECTOR
6. REINSTALL BATTERY CLAMP COVER AND AIR CLEANER INLET
7. REINSTALL V-BANK COVER