



INSPECTION


1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. DISCONNECT THROTTLE BODY
(See page SF-59)
4. REMOVE INTAKE MANIFOLD ASSEMBLY
(See page EM-30)

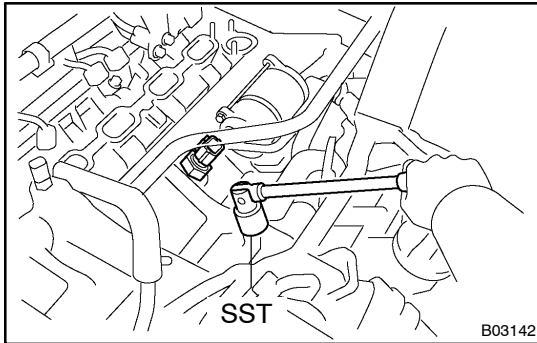

5. REMOVE KNOCK SENSOR
 - (a) Disconnect the knock sensor connectors.
 - (b) Using SST, remove the 2 knock sensors.
SST 09816-30010

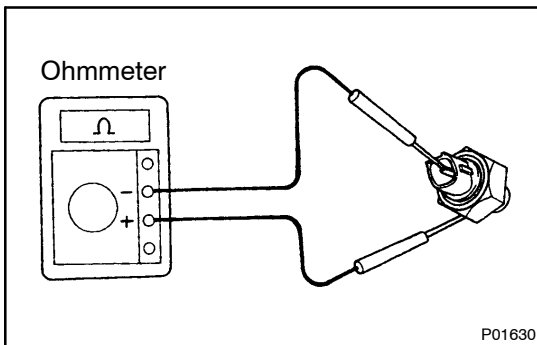

6. INSPECT KNOCK SENSOR
Using an ohmmeter, check that there is no continuity between the terminal and body.
If there is continuity, replace the sensor.

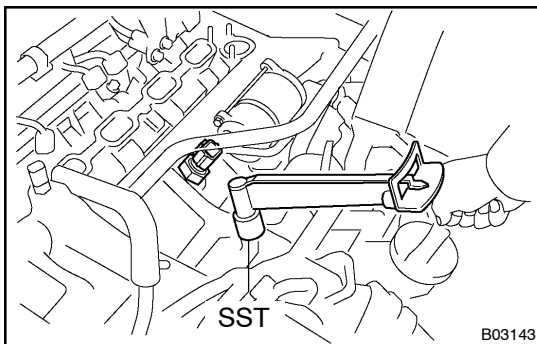

7. REINSTALL KNOCK SENSOR
 - (a) Using SST, install the 2 knock sensors.
SST 09816-30010
Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)
 - (b) Connect the knock sensor connectors.
8. REINSTALL INTAKE MANIFOLD ASSEMBLY
(See page EM-54)
9. RECONNECT THROTTLE BODY
(See page SF-61)
10. CHECK FOR FUEL LEAKS
(See page SF-1)
11. REINSTALL INTAKE AIR CONNECTOR
12. REINSTALL V-BANK COVER