


REMOVAL


1. REMOVE INSTRUMENT PANEL AND REINFORCEMENT

(See page [BO-91](#))

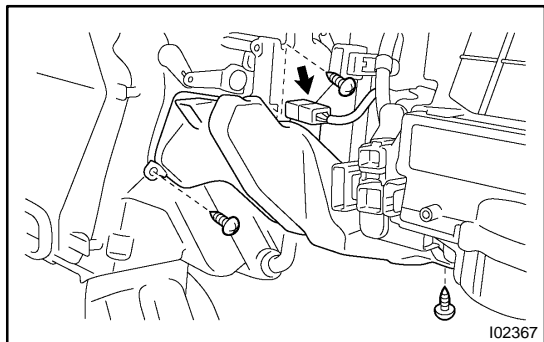


2. REMOVE AIR DUCT

- (a) Disconnect the connector clamp.
- (b) Remove the 3 screws and air duct.

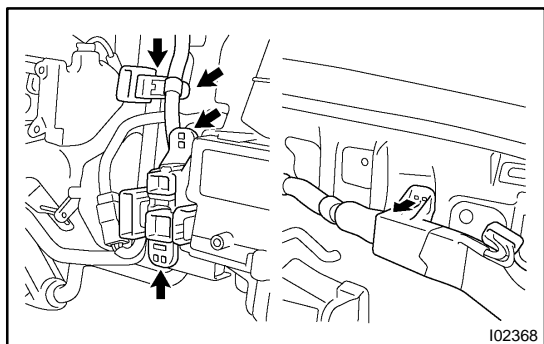

3. DISCONNECT WIRE HARNESS

- (a) Release the claw of the connector bracket and disconnect the connector bracket.
- (b) Disconnect the wire harness set clamps.
- (c) Disconnect the wire harness.

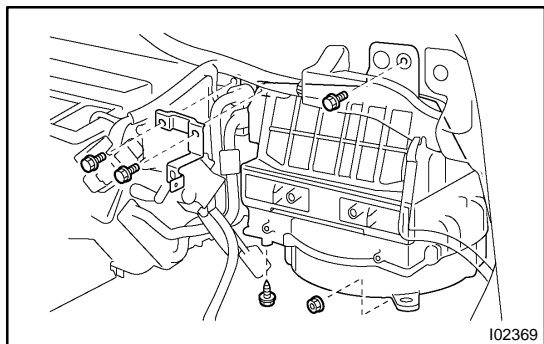

4. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the 2 bolts and bracket.
- (c) Remove the bolt, screw and nut.
- (d) Remove the blower unit.