



PARKING LOCK PAWL ON-VEHICLE REPAIR

1. REMOVE ENGINE UNDER COVER
2. REMOVE VALVE BODY (See page [AT-11](#))

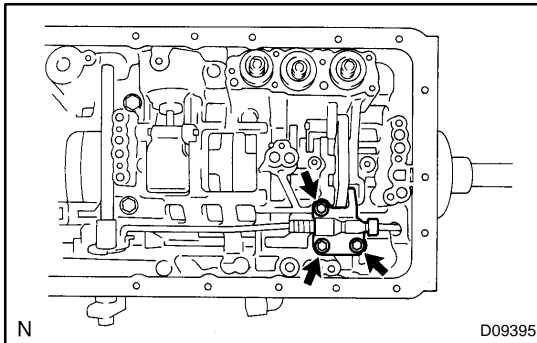

3. REMOVE PARKING LOCK PAWL BRACKET

Remove the 3 bolts and parking lock pawl bracket.

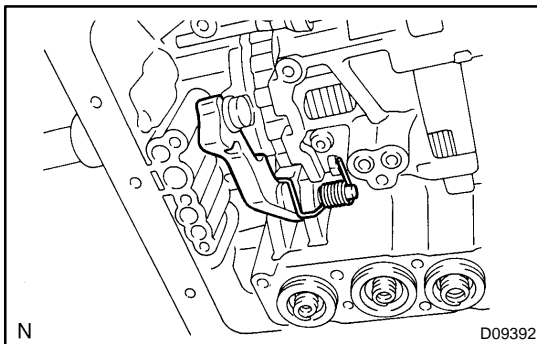

4. REMOVE SPRING FROM PARKING LOCK PAWL SHAFT
5. REMOVE PARKING LOCK PAWL SHAFT AND PARKING LOCK PAWL
6. INSTALL PARKING LOCK PAWL AND PARKING LOCK PAWL SHAFT
7. INSTALL SPRING TO PARKING LOCK PAWL SHAFT
8. INSTALL PARKING LOCK PAWL BRACKET

Install the parking lock pawl bracket with the 3 bolts.

Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)

HINT:

- Push the lock rod fully forward.
- Check that the parking lock pawl operates smoothly.

9. INSTALL VALVE BODY (See page [AT-11](#))
10. INSTALL ENGINE UNDER COVER