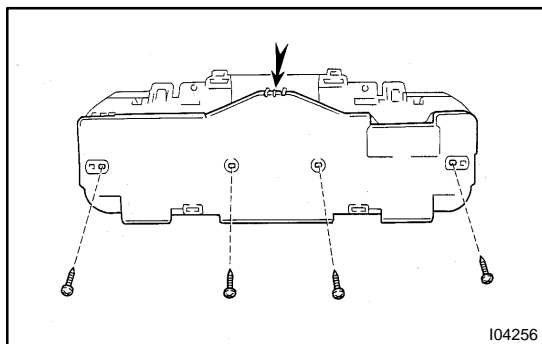


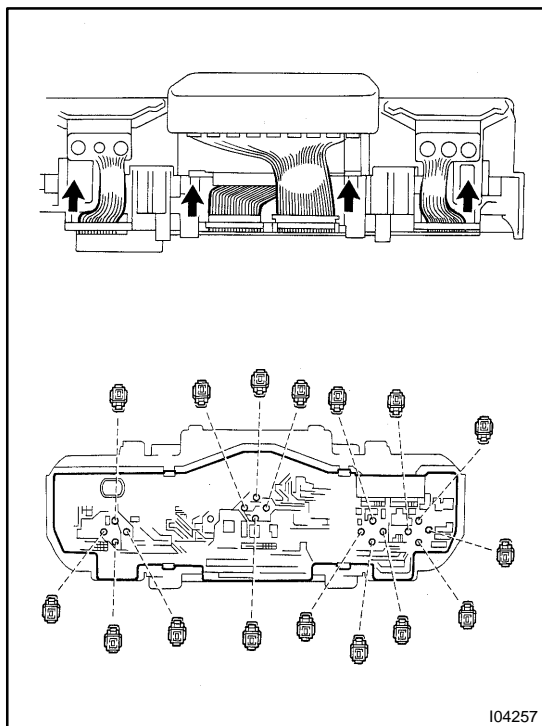
DISASSEMBLY

1. DISCONNECT TELLTALE LIGHT ASSEMBLY CONNECTOR



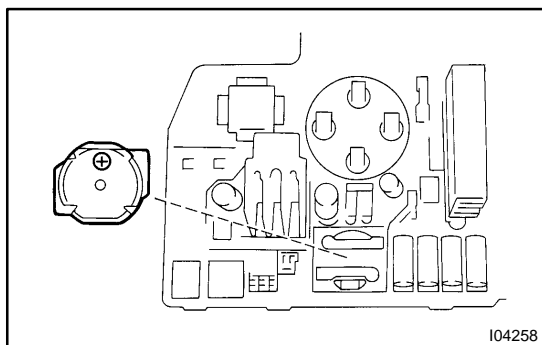
2. REMOVE METER COVER

- (a) Disengage a claw.
- (b) Remove the 4 screws and the meter cover.

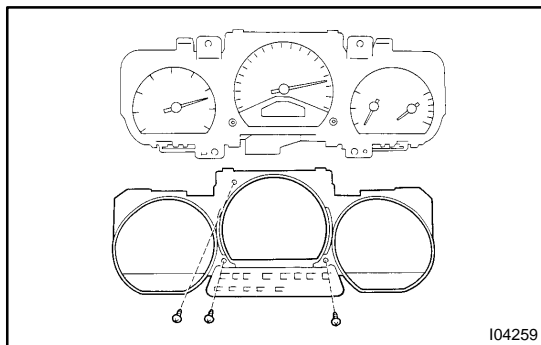


3. REMOVE ECU PLATE

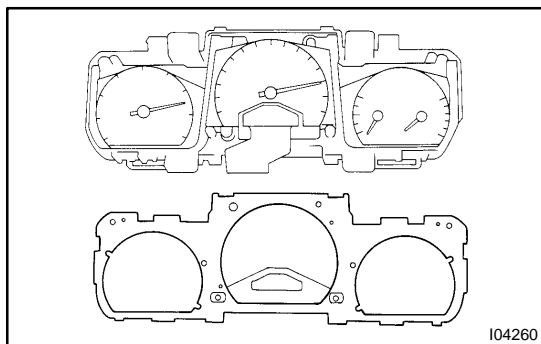
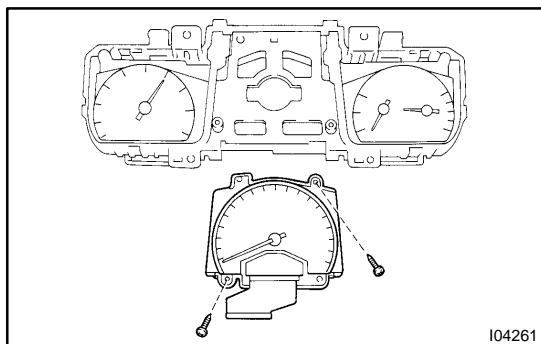
- (a) Disconnect the 4 flat circuit plates.
- (b) Remove the 16 clips and the ECU plate.



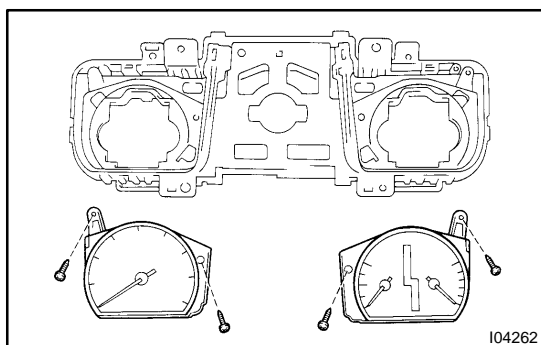
4. REMOVE BUZZER

**5. REMOVE METER GLASS**

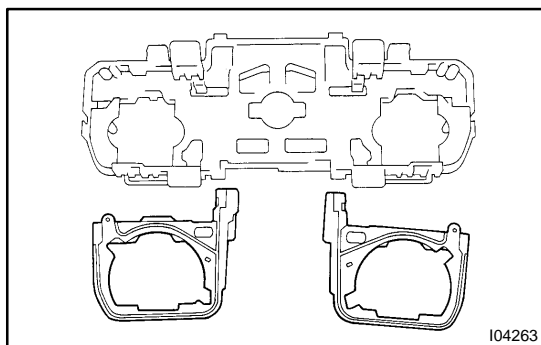
Remove the 3 screws and the meter glass.

**6. REMOVE DECORATION PLATE****7. REMOVE SPEEDOMETER**

Remove the 2 screws.

**8. REMOVE TACHOMETER, FUEL RECEIVER GAUGE AND ENGINE COOLANT TEMPERATURE RECEIVER GAUGE**

Remove the 4 screws.

**9. REMOVE COLD CATHODE TUBE WITH PLATE**