


## INSTALLATION

### INSTALL FRONT SEAT

- (a) Mount the front seat to the vehicle.
- (b) Connect the connectors.
- (c) Slide the front seat to the rearmost position.
- (d) Tighten the bolts on the front side temporarily, from the bolt on the outer side tighten them completely.  
**Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)**
- (e) Slide the front seat to the most front position.
- (f) Tighten the bolts on the rear side temporarily, from the bolt on the outer side tighten them completely.  
**Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)**
- (g) Install the seat track covers.

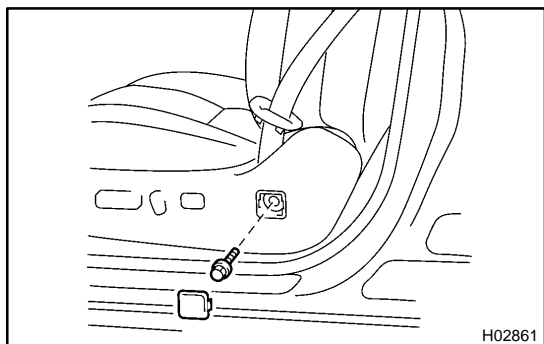

- (h) Install the front seat outer belt floor anchor to the front seat and tighten the bolt.  
**Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)**
- (i) Install the cap.