


INSTALLATION

1. **INSTALL NO. 3 FUEL TANK FILLER PIPE SHIELD**
2. **INSTALL FUEL FILLER OPENING LID**
 - (a) Install the lock retainer with the nut to the opening lid.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
 - (b) Using a riveter, install the fuel filler opening lid with the 2 rivets to the body.

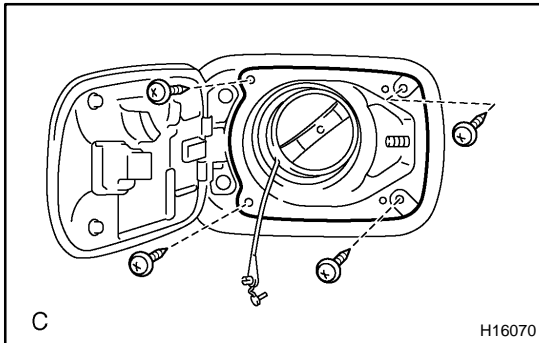

3. INSTALL FUEL TANK FILLER PIPE SHIELD


- (a) Remove the fuel tank cap.
- (b) Install the fuel inlet pipe shield to the body.
- (c) Install the fuel tank cap quickly.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.


- (d) Tighten the 4 screws.
4. **INSTALL FUEL TANK CAP TETHER TO FUEL FILLER OPENING LID**

Install the fuel tank cap tether with the clip to the fuel filler opening lid.

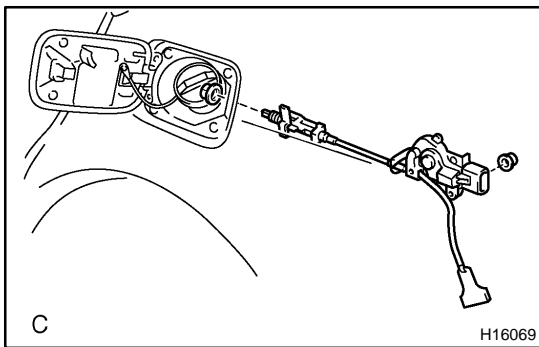

5. INSTALL FUEL LID LOCK ASSEMBLY

- (a) Connect the connector, then install the lock assembly with the nut.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (b) Torque the nut from the fuel lid side.
Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

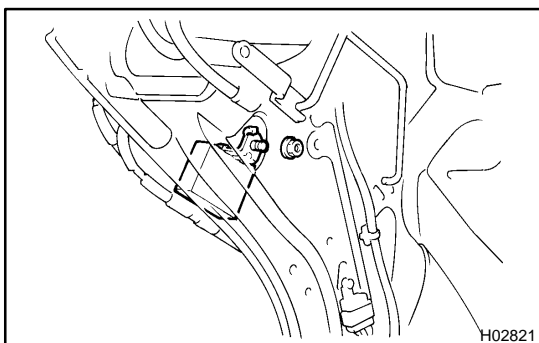

- (c) Connect the connector, then install the lamp failure relay with the nut.
6. **INSTALL LUGGAGE COMPARTMENT TRIM SIDE COVER LH**
7. **INSTALL LUGGAGE COMPARTMENT TRIM FRONT COVER**
8. **INSTALL REAR FLOOR FINISH PLATE**
9. **INSTALL LUGGAGE COMPARTMENT FLOOR MAT**