



REMOVAL

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE REAR FLOOR FINISH PLATE
3. REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER
4. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH

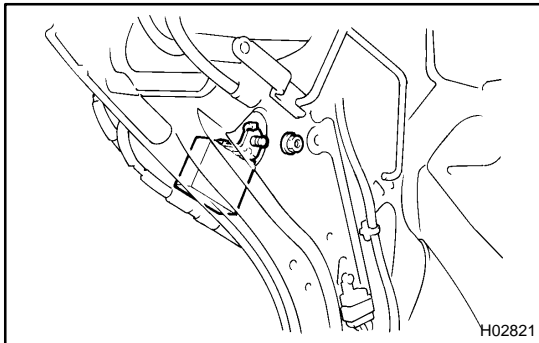

5. REMOVE FUEL LID LOCK ASSEMBLY


- (a) Remove the nut and lamp failure relay, then disconnect the connector.

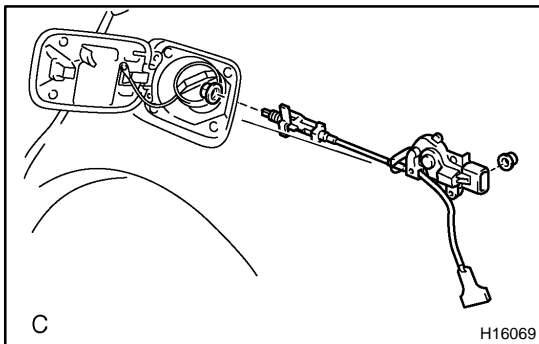

- (b) Remove the nut from the fuel lid side.
- (c) Remove the nut and lock assembly, then disconnect the connector.

6. REMOVE FUEL TANK CAP TETHER FROM FUEL FILLER OPENING LID

Remove the clip and fuel tank cap tether from the fuel filler opening lid.

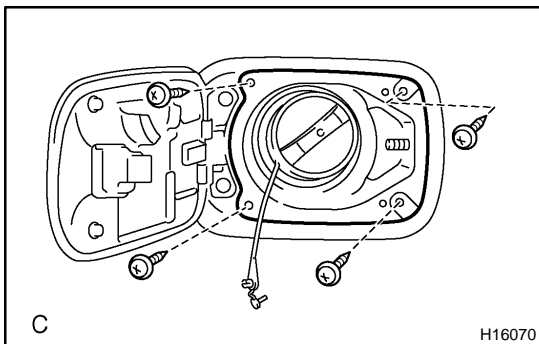


7. REMOVE FUEL TANK FILLER PIPE SHIELD

- (a) Remove the 4 screws.
- (b) Remove the fuel tank cap and shield.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.

- (c) Install the fuel tank cap quickly.

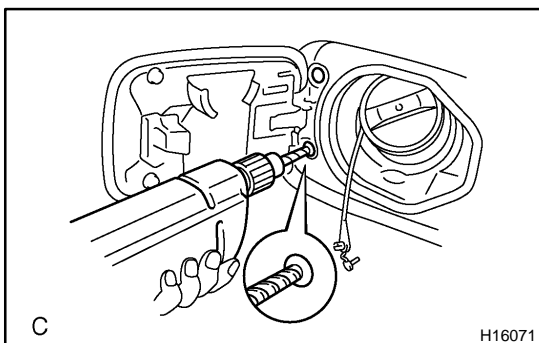

8. REMOVE FUEL FILLER OPENING LID

- (a) Using a drill, drill out the rivet heads.
- (b) Remove the fuel filler opening lid.
- (c) Remove the nut and fuel filler opening lid lock retainer from the opening lid.

9. REMOVE NO. 3 FUEL TANK FILLER PIPE SHIELD