


REMOVAL

1. REMOVE THESE PARTS:

- (a) Wiper arms
- (b) Weatherstrip
- (c) Cowl louver

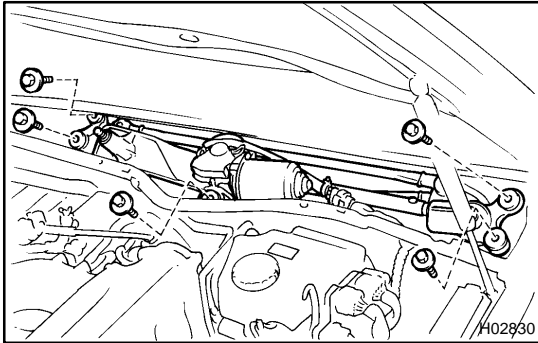


2. REMOVE WIPER LINK ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 5 bolts and wiper link assembly.

3. REMOVE WIPER MOTOR

Remove the 2 screws and wiper motor from the wiper link.

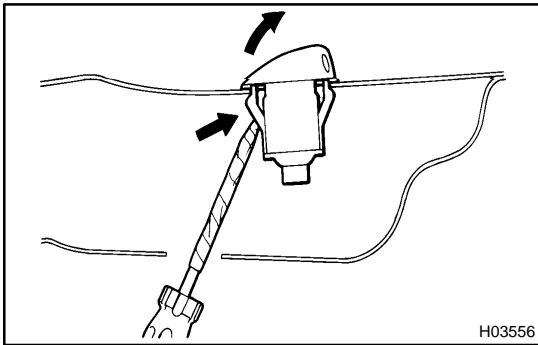

4. REMOVE WASHER NOZZLES

- (a) Remove the hood insulator.
- (b) Disconnect the washer hoses.
- (c) Using a screwdriver, remove the washer nozzles.

HINT:

Tape the screwdriver tip before use.