

## DISASSEMBLY

### 1. REMOVE DEFROSTER NOZZLE

- (a) Remove the 5 screws.
- (b) Remove the defroster nozzle.

### 2. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT

Remove the screw and the No. 1 side defroster nozzle duct.

### 3. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

Remove the screw and No. 2 side defroster nozzle duct.

### 4. REMOVE NO. 4 HEATER TO REGISTER DUCT


- (a) Remove the 2 screws.
- (b) Remove the No. 4 heater to register duct.

### 5. REMOVE NO. 1 REGISTER

- (a) Remove the 2 screws.
- (b) Remove the No. 1 register.

### 6. REMOVE NO. 3 REGISTER

- (a) Remove the 2 screws.
- (b) Remove the No. 3 register.

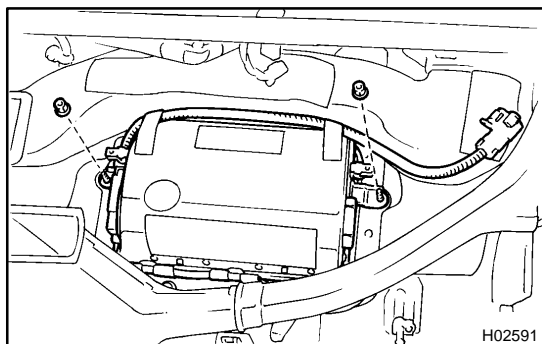


### 7. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 nuts and straps.

#### NOTICE:

At the time of reassembly, please refer to the following items.

- When installing the front passenger airbag assembly, make sure that the strap is not distorted and installed to the brackets securely.
- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

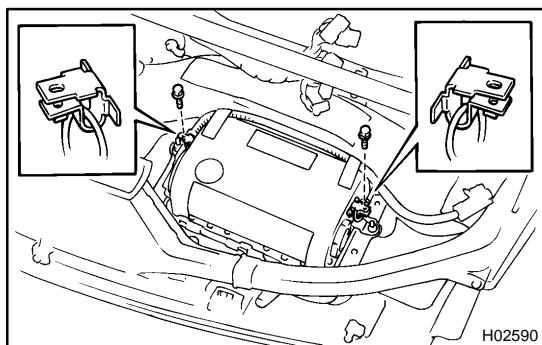

- (b) Remove the 2 bolts and front passenger airbag assembly.

#### CAUTION:


- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

Torque: 5.6 N·m (57 kgf·cm, 50 in.-lbf)

**NOTICE:**

At the time of reassembly, please refer to the following items.

- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
- Install the straps so that they are not pinched between the airbag and instrument panel.

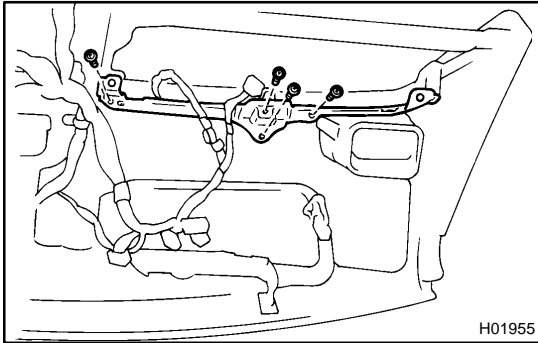**8. REMOVE GLOVE COMPARTMENT DOOR LOCK STRIKER PLATE**

- Remove the 4 screws.
- Remove the glove compartment door lock striker plate.

**9. REMOVE THESE PARTS:**

- Instrument panel wire harness
- No. 1 meter hood retainer
- No. 1 radio mounting bracket
- No. 2 radio mounting bracket
- No. 4 finish panel mounting bracket
- No. 4 side defroster nozzle
- No. 1 defroster nozzle garnish