


REMOVAL

1. REMOVE THESE PARTS:


- (a) Rear door scuff plate
- (b) Opening trim
- (c) Rear seat side garnish

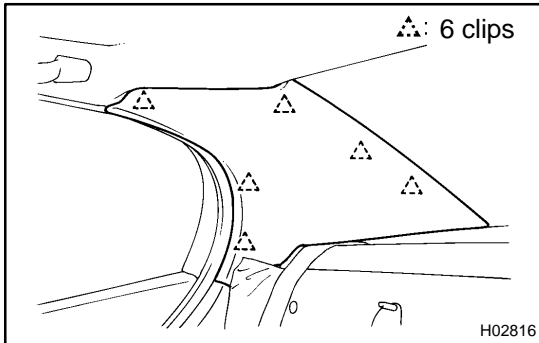

2. REMOVE ROOF SIDE INNER GARNISH


- (a) Remove the rear seat headrest.
- (b) Remove the roof side inner garnish.

3. REMOVE ROOF SIDE INNER GARNISH PAD

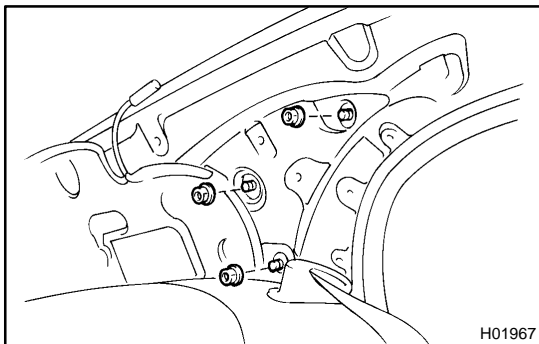

4. REMOVE ROOF DRIP SIDE FINISH MOULDING

- (a) Remove the 3 nuts.

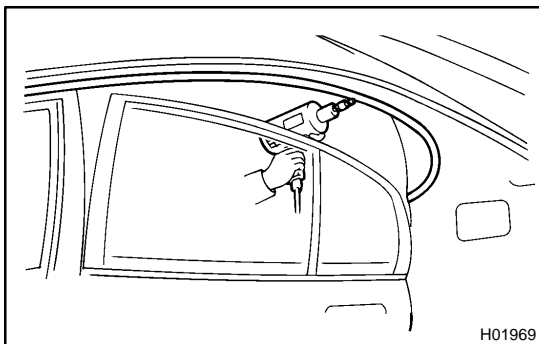

- (b) Using a drill of less than $\varnothing 5.0$ mm (0.20 in.), drill out the rivet heads as shown in the illustration.

CAUTION:


The cut rivet and rivet cutter will be hot , avoid touching them.

NOTICE:

- Do not jiggle the rivet cutter while cutting.
- You may enlarge the rivet hole or damage the rivet cutter.

HINT:

Do not drill the body.

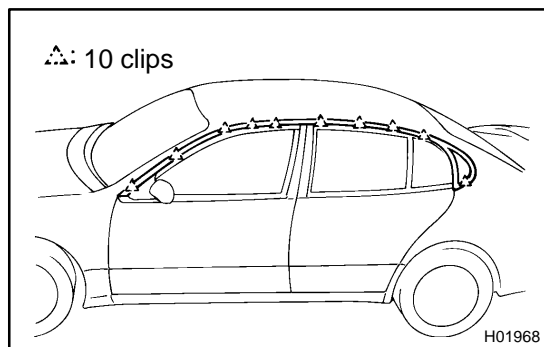

- (c) Remove the clips and the roof drip side finish moulding.