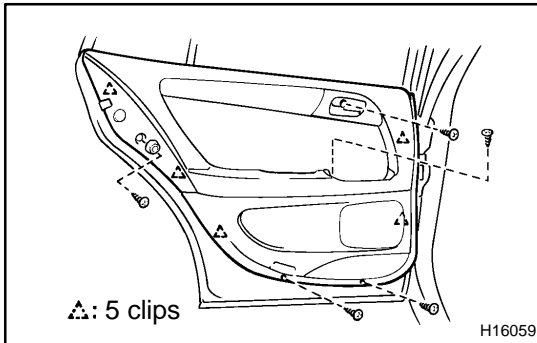


DISASSEMBLY

1. REMOVE THESE PARTS:

- (a) Door inside handle bezel
- (b) Armrest base panel
- (c) Rear door courtesy light



2. REMOVE DOOR TRIM

- (a) Remove the 5 screws.
- (b) Insert a screwdriver between the panel and the trim and remove the clips.

NOTICE:

Do not scratch the panel with the screwdriver.

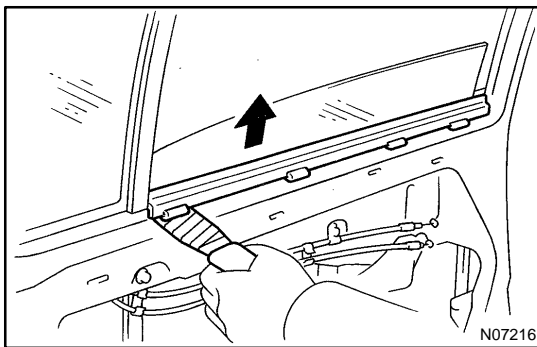
HINT:

Tape the screwdriver tip before use.

- (c) Remove the trim by pulling all of the trim up.
- (d) Remove the 2 cables from the door inside handle.

3. REMOVE THESE PARTS:

- (a) Rear door speaker
- (b) Rear door frame garnish
- (c) Inside handle
- (d) Rear door ECU



4. REMOVE REAR DOOR INNER WEATHERSTRIP

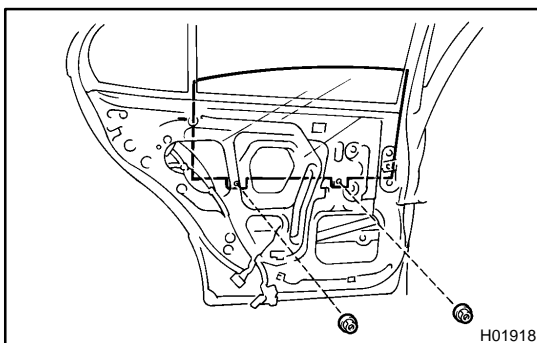
Using a scraper, remove the inner weatherstrip.

HINT:

Tape the scraper tip before use.

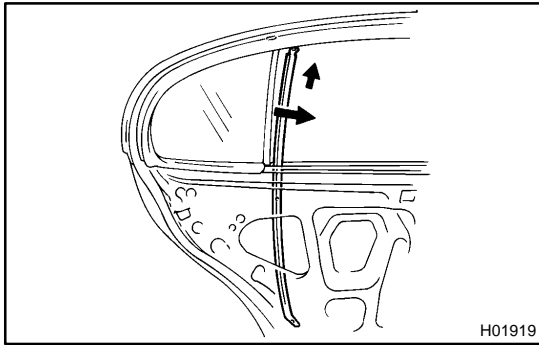
5. REMOVE SERVICE HOLE COVER

6. REMOVE REAR DOOR GLASS RUN

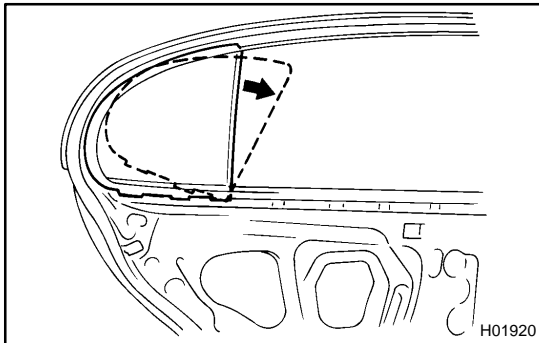
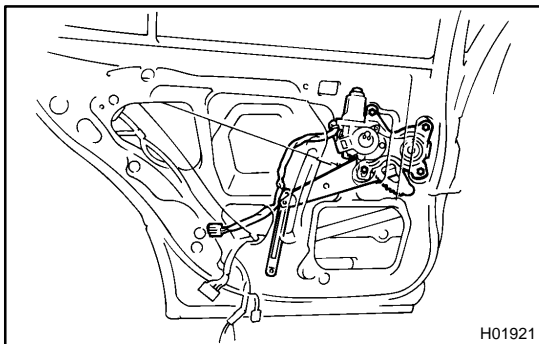


7. REMOVE DOOR GLASS

Remove the 2 nuts and the door glass.

**8. REMOVE DIVISION BAR**

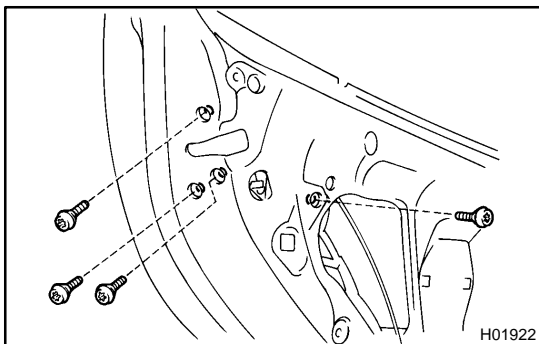
- (a) Remove the 2 bolts and screw.
- (b) Remove the division bar.

**9. REMOVE REAR DOOR QUARTER WINDOW GLASS****10. REMOVE WINDOW REGULATOR**

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

HINT:

At the time of reassembly, please refer to the following item.
Apply adhesive MP grease to window rollers.

**11. REMOVE DOOR LOCK**

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

HINT:

At the time of reassembly, please refer to the following item.
Apply adhesive to the screw.

Part No. 08833-00070 THREE BOND 1324 or equivalent

12. REMOVE THESE PARTS:

- (a) Rear door outside handle
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (b) Child protector lock lever knob
- (c) Rear door inside handle
- (d) Ornament
- (e) Panel