


## REMOVAL

### 1. REMOVE SEAT CUSHION ASSEMBLY

Pull up the front portion of the seat cushion assembly and remove it.

### 2. REMOVE SEATBACK ASSEMBLY


(a) Remove the 3 headrests.

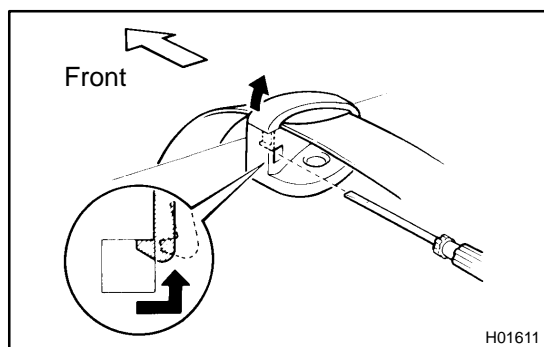

(b) Using a screwdriver, remove the seat belt from the shoulder belt guide as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

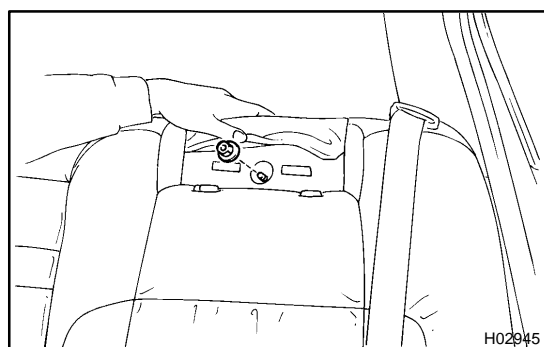

(c) Rip the seatback open and remove the nut.

HINT:

Do the same for RH and LH.

(d) Remove the 4 bolts.

(e) Pull up the seatback assembly to remove it.