

SEAT BELT PRETENSIONER REMOVAL

BOOVIP-03

NOTICE:

- If the wiring connector of the supplemental restraint system is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.

1. REMOVE THESE PARTS:

- (a) Front door inside scuff plate
- (b) Front door opening trim
- (c) Rear door inside scuff plate
- (d) Rear door opening trim
- (e) Center pillar lower garnish
- (f) Center pillar upper garnish

2. REMOVE FRONT SEAT OUTER BELT**CAUTION:**

Never disassemble the front seat outer belt.

NOTICE:


When removing the front outer seat belt, take care not to pull the seat belt pretensioner wire harness.

- (a) Using a screwdriver, remove the cover of the front seat cushion shield.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolts and floor anchor from the front seat.
- (c) Remove the bolt and shoulder anchor.

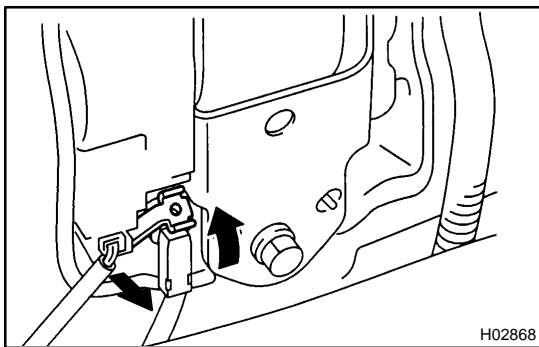

- (d) Disconnect the connector.
- (e) Disconnect the pretensioner connector as shown in the illustration.
- (f) Disconnect the retractor switch connector.
- (g) Remove the 2 bolts and front seat outer belt.