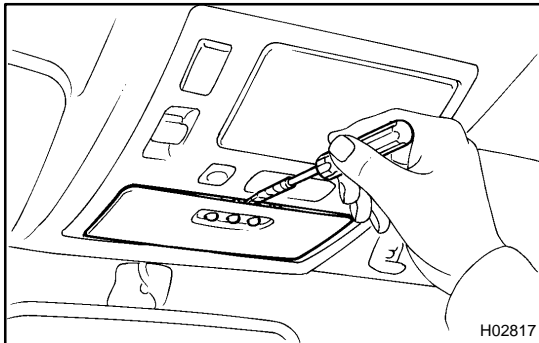


REMOVAL

1. REMOVE PART OF FRONT DOOR OPENING TRIMS
2. REMOVE ASSIST GRIPS
3. REMOVE SUN VISORS AND HOLDERS



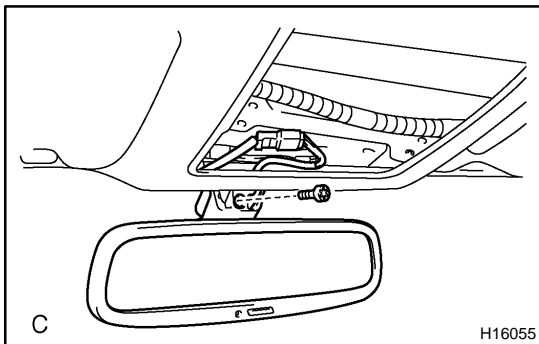
4. REMOVE MAP LAMP ASSEMBLY

- (a) Using a screwdriver, remove the lens and cover.

HINT:

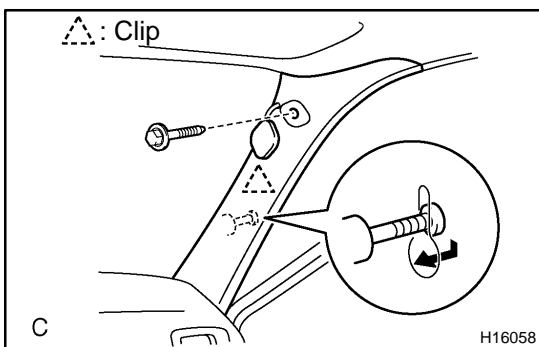
Tape the screwdriver tip before use.

- (b) Remove the 4 screws and map lamp assembly.
- (c) Disconnect the connectors.



5. REMOVE INNER REAR VIEW MIRROR

- (a) Remove the cover.
- (b) Using a torx socket wrench, remove the bolt.
Torx wrench: T30 (part No. 09042-00010 or locally manufactured tool)
- (c) Remove the inner rear view mirror.



6. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, open the cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt.
- (c) Remove the front pillar garnish and cover.
- (d) Employ the same manner described above to the other side.

7. REMOVE ROOF HEADLINING

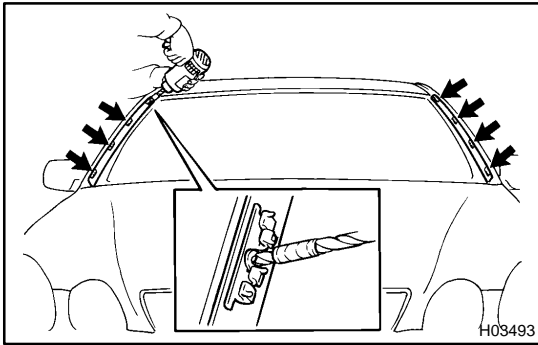
- (a) w/ Sliding roof:
Remove the opening trim.
- (b) Remove the front portion of roof headlining.

8. REMOVE ROOF DRIP SIDE FINISH CENTER MOULDINGS

9. REMOVE WIPER ARMS

10. REMOVE WEATHERSTRIP

11. REMOVE COWL LOUVER

**12. REMOVE WINDSHIELD OUTSIDE MOULDING CLIP**

Using a drill of less than \varnothing 4 mm (0.16 in.), drill out the rivet heads as shown in the illustration.

CAUTION:

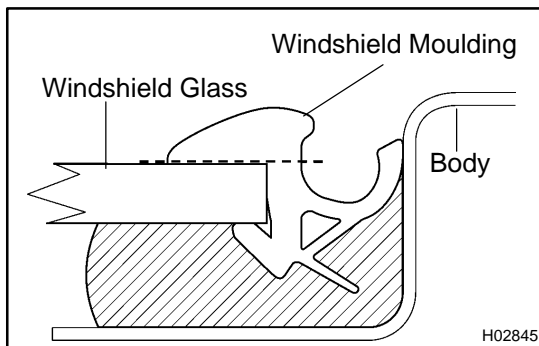
The cut rivet and rivet cutter will be not, avoid touching them.

NOTICE:

Do not jiggle the rivet cutter while cutting, otherwise you may enlarge the rivet hole or damage the rivet cutter.

HINT:

Do not drill the body.

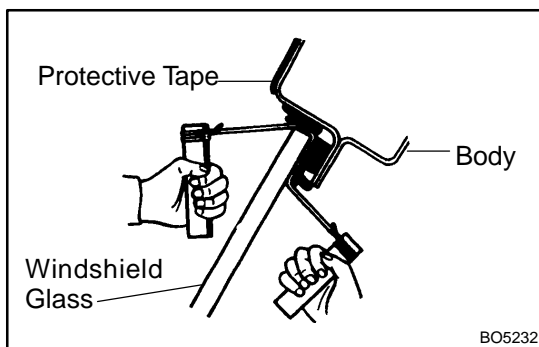
**13. REMOVE WINDSHIELD UPPER MOULDING**

- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

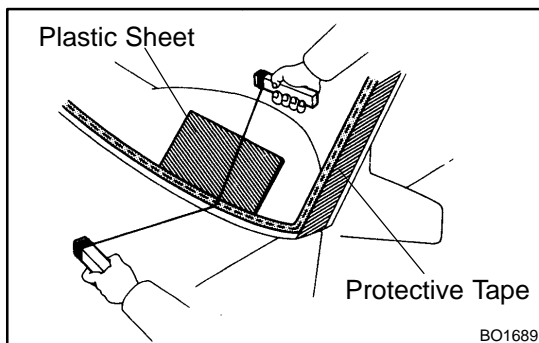
**14. REMOVE WINDSHIELD GLASS**

- (a) Push piano wire through between the body and glass from the interior.

- (b) Tie both wire ends to a wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

**NOTICE:**

When separating the glass, be careful not to damage the paint, interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

- (c) Cut the adhesive by pulling the piano wire around it.

- (d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.