


## REMOVAL

### 1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the seat cushion and 2 headrests.
- (b) Remove the 4 bolts, 2 nuts and seatback.  
**Torque: 18 N·m (185 kgf·cm, 13 in.-lbf)**
- (c) Disconnect the speed sensor connector and pull out the sensor wire harness with the grommet.

### 2. REMOVE SPEED SENSOR

- (a) Remove the clamp bolt holding the sensor wire harness to the suspension arm No. 1.  
**Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)**
- (b) Remove the clamp nut holding the sensor wire harness to the body.  
**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

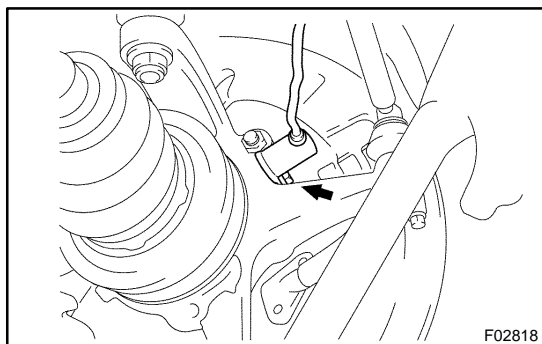

- (c) Remove the sensor installation bolt and speed sensor from the axle carrier.  
**Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)**