



## INSTALLATION

### 1. INSTALL GENERATOR

- (a) Install the generator and stay with the nut and bolt.  
**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**
- (b) Install the clamp (for generator wire) to the cord clip on alternator.

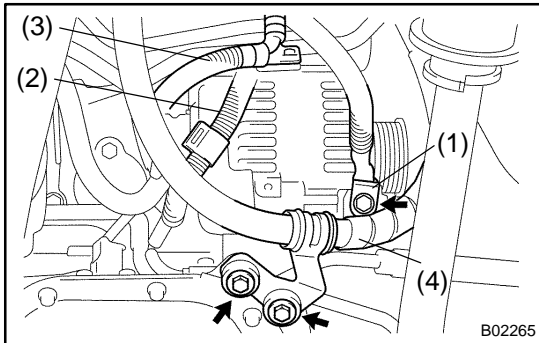

- (c) Install these parts:
  - (1) Install the ground cable.
  - (2) Install the wire (for generator wire) to clamp on cord clip.
  - (3) Install the wire (for generator connector) to clamp on cord clip.
    - Install the clamp to the wire with a vinyl tape.
    - Install the clamp to the cord clip.
  - (4) Install the PS oil hose to No.1 oil pan.

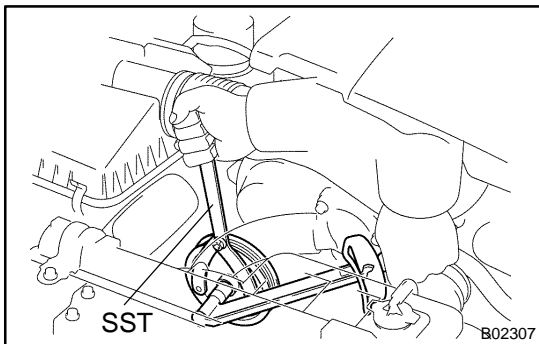


### 2. INSTALL PS PUMP PULLEY

Using SST, install the PS pump pulley with the nut.

SST 09960-10010 (09962-01000, 09963-01000)

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

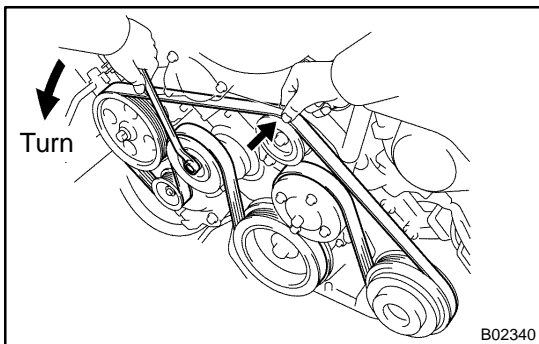

### 3. INSTALL DRIVE BELT

Install the drive belt by turning the drive belt tensioner counter-clockwise.

HINT:

The tensioner pulley bolt has a left-hand thread.

### 4. PERFORM ON-VEHICLE INSPECTION

(See page [CH-1](#))

### 5. INSTALL AIR CLEANER INLET

### 6. INSTALL ENGINE UNDER COVER