


## RADIATOR FAN MAIN RELAY INSPECTION

C00AK-01

1. REMOVE RELAY BOX COVER
2. REMOVE RADIATOR FAN MAIN RELAY (Marking: RAD FAN MAIN)

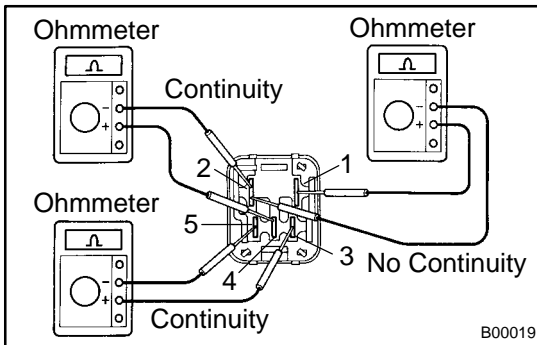

### 3. INSPECT RADIATOR FAN MAIN RELAY

- (a) Inspect the relay continuity.
  - (1) Using an ohmmeter, check that there is continuity between terminals 3 and 5.


If there is no continuity, replace the relay.

  - (2) Check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

  - (3) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

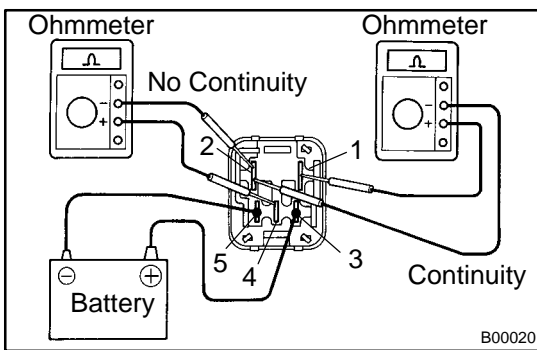

- (b) Inspect the relay operation.
  - (1) Apply battery positive voltage across terminals 3 and 5.
  - (2) Using an ohmmeter, check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

  - (3) Check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.
4. REINSTALL RADIATOR FAN MAIN RELAY
5. REINSTALL RELAY BOX COVER