


INSTALLATION

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- (a) Install a new gasket to the thermostat.
- (b) Insert the thermostat into the water inlet housing with the jiggle valve facing straight upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

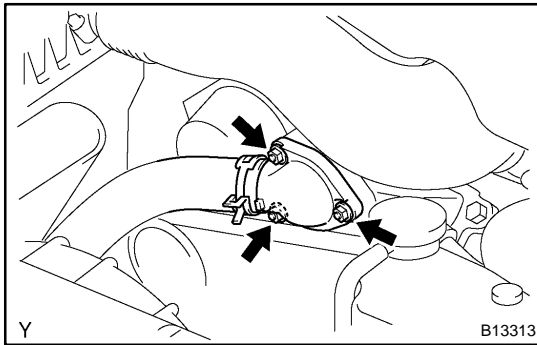

2. INSTALL WATER INLET

Install the water inlet with the 3 nuts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

3. **FILL WITH ENGINE COOLANT** (See page [CO-2](#))
4. **START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS**
5. **INSTALL AIR CLEANER INLET**