


REMOVAL

HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. **DRAIN ENGINE COOLANT**
2. **REMOVE AIR CLEANER INLET**

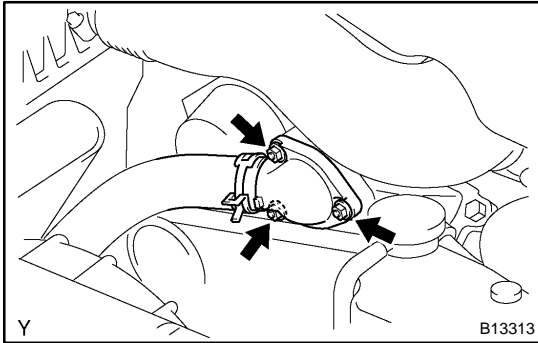

3. **DISCONNECT WATER INLET FROM WATER INLET HOUSING**

Remove the 3 nuts, and disconnect the water inlet from the water inlet housing.

4. **REMOVE THERMOSTAT**

- (a) Remove the thermostat.
- (b) Remove the gasket from the thermostat.