


DTC	P0500	Vehicle Speed Sensor Malfunction
------------	--------------	---


CIRCUIT DESCRIPTION

The vehicle speed sensor detects the rotation speed of the transmission output shaft and sends signals to the ECM. The ECM determines the vehicle speed based on these signals. An AC voltage is generated in the vehicle speed sensor coil as the rotor mounted on the output shaft rotates, and this voltage is sent to the ECM.

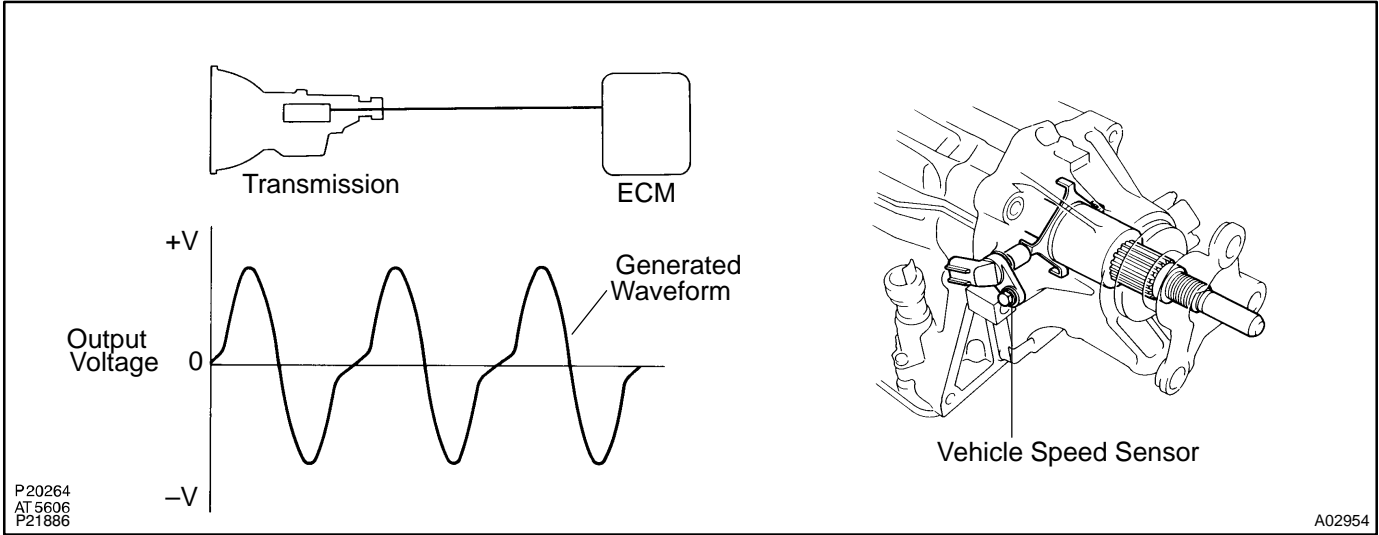

DTC No.	DTC Detecting Condition	Trouble Area
P0500	No vehicle speed sensor signal to ECM under conditions (a) and (b): (a) Park/neutral position switch is OFF (b) Vehicle is being driven	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM

WIRING DIAGRAM

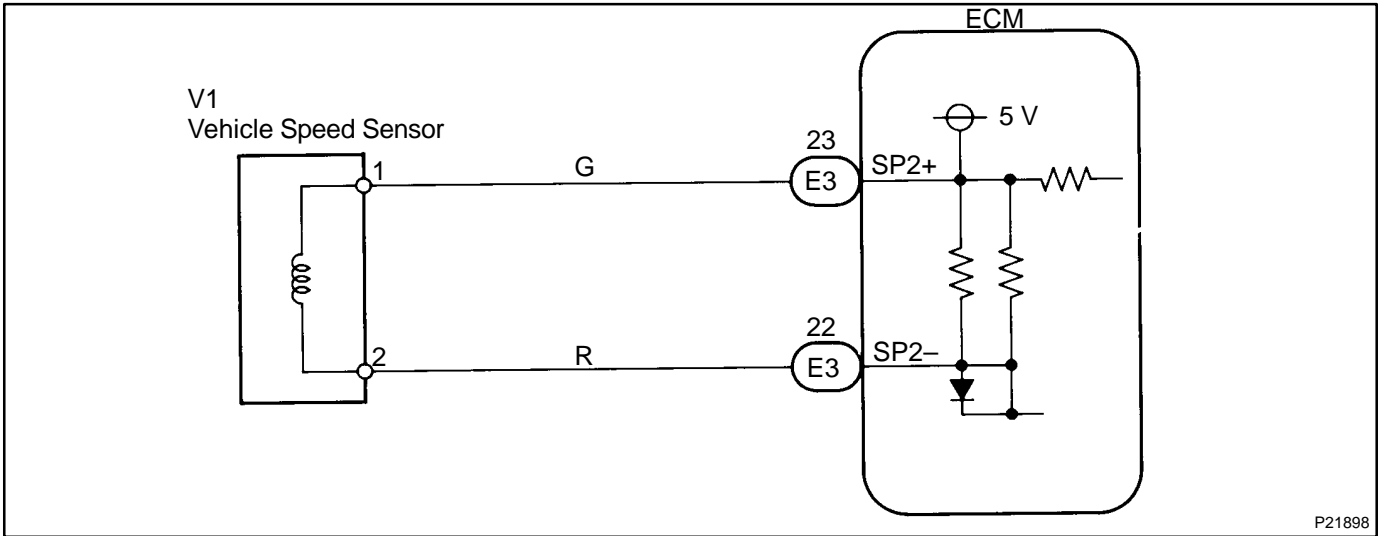

INSPECTION PROCEDURE

HINT:

Read freeze frame data using LEXUS hand-held tester or OBD II scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

- | | |
|---|---|
| 1 | Connect OBD II scan tool or LEXUS hand-held tester, and read value of vehicle speed value. |
|---|---|

PREPARATION:

- (a) Connect the OBD II scan tool or LEXUS hand-held tester to the DLC3.
- (b) Start the engine and push the OBD II scan tool or LEXUS hand-held tester main switch ON.

CHECK:

Drive the vehicle and read vehicle speed value.

OK:

Vehicle speed matches tester speed value.

NG

Check and replace ECM (See page [IN-32](#)).

OK


- | | |
|---|--|
| 2 | Check speedometer circuit (See page BE-93). |
|---|--|

NG

Repair or replace speedometer circuit.

OK

- | | |
|---|---|
| 3 | Check resistance between terminals SP2+ and SP2- of ECM connector. |
|---|---|

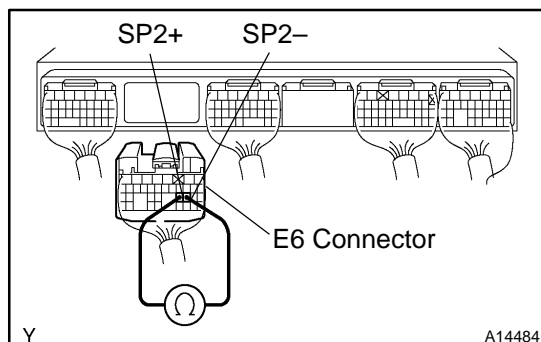

PREPARATION:

- (a) Remove the engine room ECU cover (See page [SF-82](#)).
- (b) Disconnect the E6 connector from the ECM.

CHECK:

Check the resistance between terminals SP2+ and SP2- of the ECM connector.

OK:


Resistance: 560 – 680 Ω

OK

Check and replace ECM (See page [IN-32](#)).

NG

4 Check vehicle speed sensor.

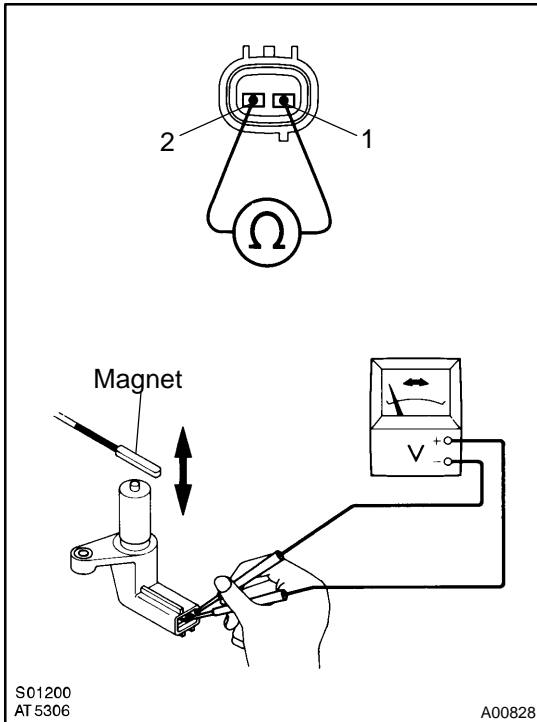

PREPARATION:

Remove the vehicle speed sensor from the transmission.

CHECK:

Measure the resistance between terminals 1 and 2 of the speed sensor.

OK:

Resistance: 560 – 680 Ω

Reference:

Check vehicle speed sensor's function

CHECK:


Check the voltage between terminals 1 and 2 of the vehicle speed sensor when a magnet is put close to front end of the vehicle speed sensor then taken away quickly.

OK:

Voltage is generated intermittently.

HINT:

Voltage generated is extremely low.

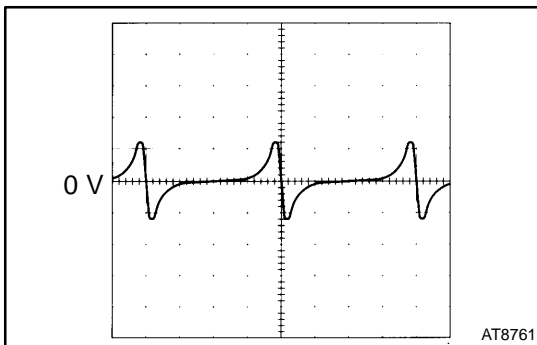

Reference: INSPECTION USING OSCILLOSCOPE

Check the waveform between terminals SP2+ and SP2– when the vehicle speed is approx. 60 km/h (37 mph).

NG

Replace vehicle speed sensor.

OK

Check and repair harness and connector between ECM and vehicle speed sensor (See page [IN-32](#)).