

CIRCUIT INSPECTION


DTC	B2602	Key Unlock Warning Switch Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The different signal (ON or OFF) is sent from Body ECU to Tilt and Telescopic ECU through the communication bus when the ignition key is inserted into the key cylinder. Tilt and Telescopic ECU uses this signal to operate the Auto Away Function or Auto Return Function.

DTC No. (See Page)	Detection Item	Trouble Area
B2602	The signal (OFF) is sent to Tilt and Telescopic ECU when the ignition switch is turned to ACC, ON or START position.	Key Unlock Warning switch

WIRING DIAGRAM

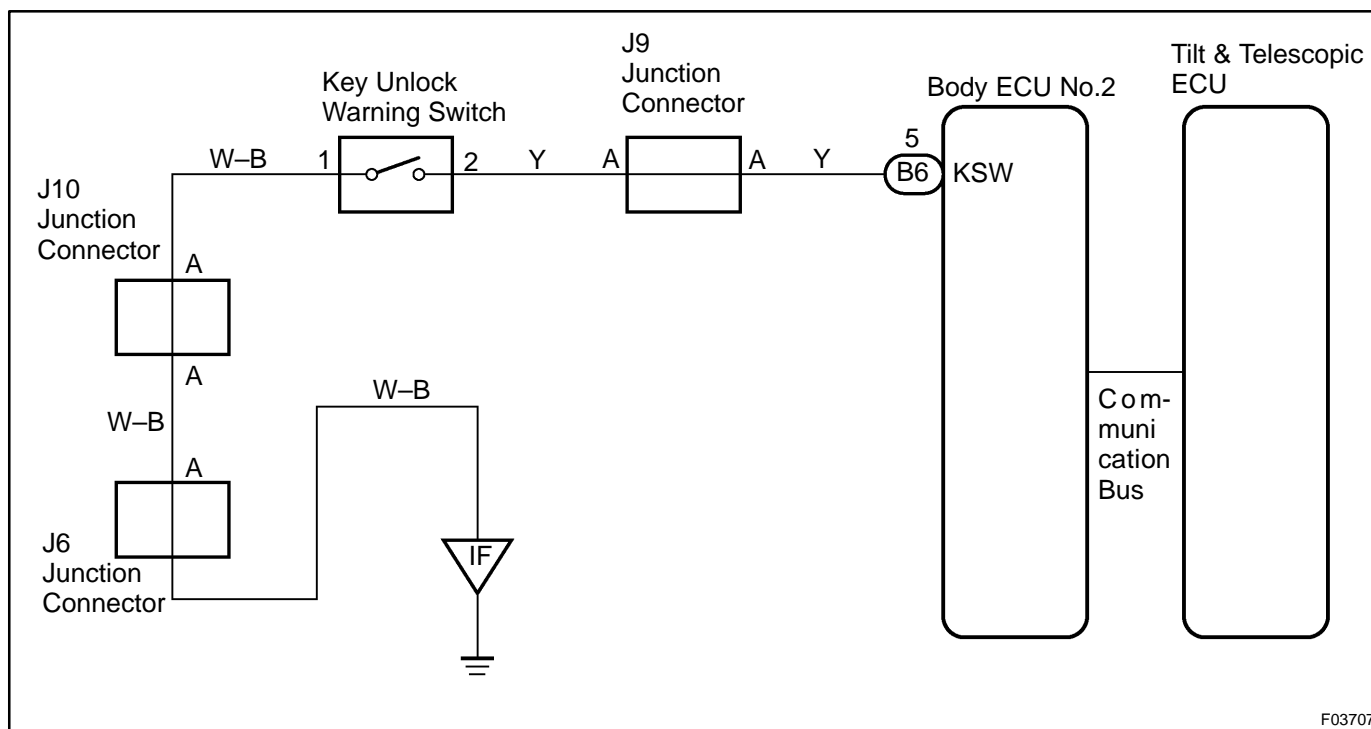

F03707

INSPECTION PROCEDURE

Check the Key Unlock Warning Switch (See page [BE-31](#)).