


## TERMINALS OF ECU

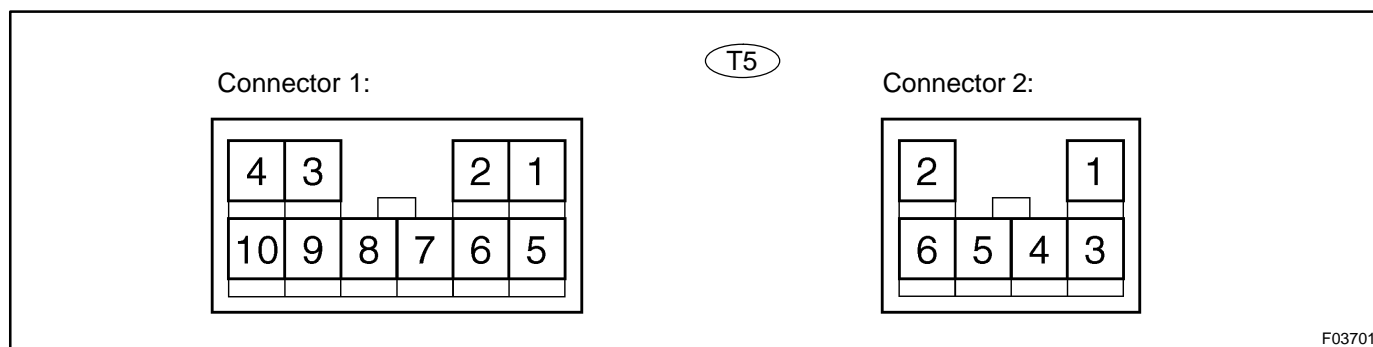

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IG – GND (T5-2 – T5-4) *1	B-R – W-B	IG switch ON	10 – 16
		IG switch LOCK	Below 1
VC – ECUE (T5-3 – T5-1) *1	Y-R – W-B	IG switch ON	4.5 – 5.5
GND – Body Ground (T5-4 – Body Ground) *1	W-B – Body Ground	Always	Below 1
ECUB – Body Ground (T5-5 – Body Ground) *1	G-W – Body Ground	Always	10 – 16
ECUB – ECUE (T5-5 – T5-1) *1	G-W – W-B	Always	10 – 16
MSW – ECUE (T5-8 – T5-1) *1	Y – W-B	IG switch ON, tilt up by manual switch	1.30 – 1.70
		IG switch ON, tilt down by manual switch	0.30 – 0.50
		IG switch ON, telescopic extended by manual switch	2.05 – 2.75
		IG switch ON, telescopic contracted by manual switch	0.65 – 0.95
		Manual switch is not operating	Below 0.20
+B – GND (T5-10 – T5-4) *1	L – W-B	Always	10 – 16
TIM- – GND (P6-3*2 – T5-4*1)	– – W-B	Key unlock warning switch ON, tilt down	10 – 16
		Tilt is not operating	Below 1
TEM+ – GND (P6-6*2 – T5-4*1)	– – W-B	Key unlock warning switch ON, telescopic contract	10 – 16
		Telescopic is not operating	Below 1
TIM+ – GND (P6-4*2 – T5-4*1)	– – W-B	Key unlock warning switch ON, tilt up	10 – 16
		Tilt is not operating	Below 1
TEM- – GND (P6-5*2 – T5-4*1)	– – W-B	Key unlock warning switch ON, telescopic extend	10 – 16
		Telescopic is not operating	Below 1

\*1: Connector 1

\*2: Connector 2