


Door courtesy light and courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

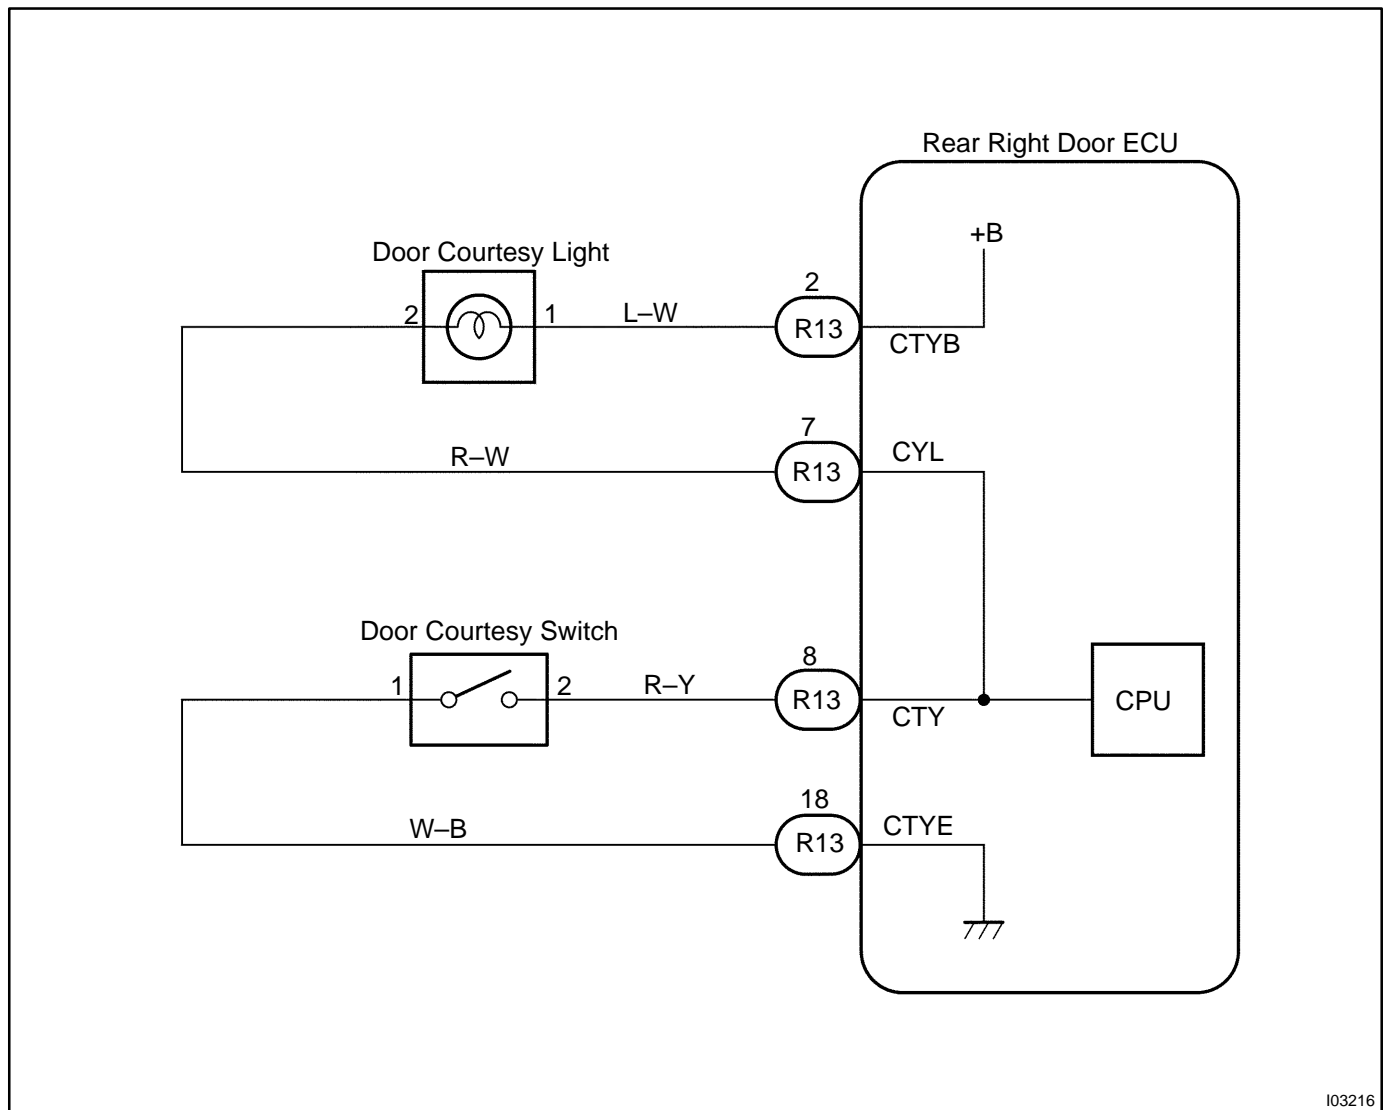

I03216

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check operation of door courtesy light. |
|----------|--|

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-931](#))

NG

- | | |
|----------|---|
| 2 | Check courtesy light. (See page BE-61) |
|----------|---|

NG

Replace the courtesy light.

OK

- | | |
|----------|--|
| 3 | Check courtesy switch. (See page BE-61) |
|----------|--|

NG

Replace the courtesy switch.

OK

- | | |
|----------|---|
| 4 | Check wireharness and connector between courtesy light and rear right door ECU, courtesy switch and rear right door ECU. |
|----------|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))