


TERMINALS OF ECU

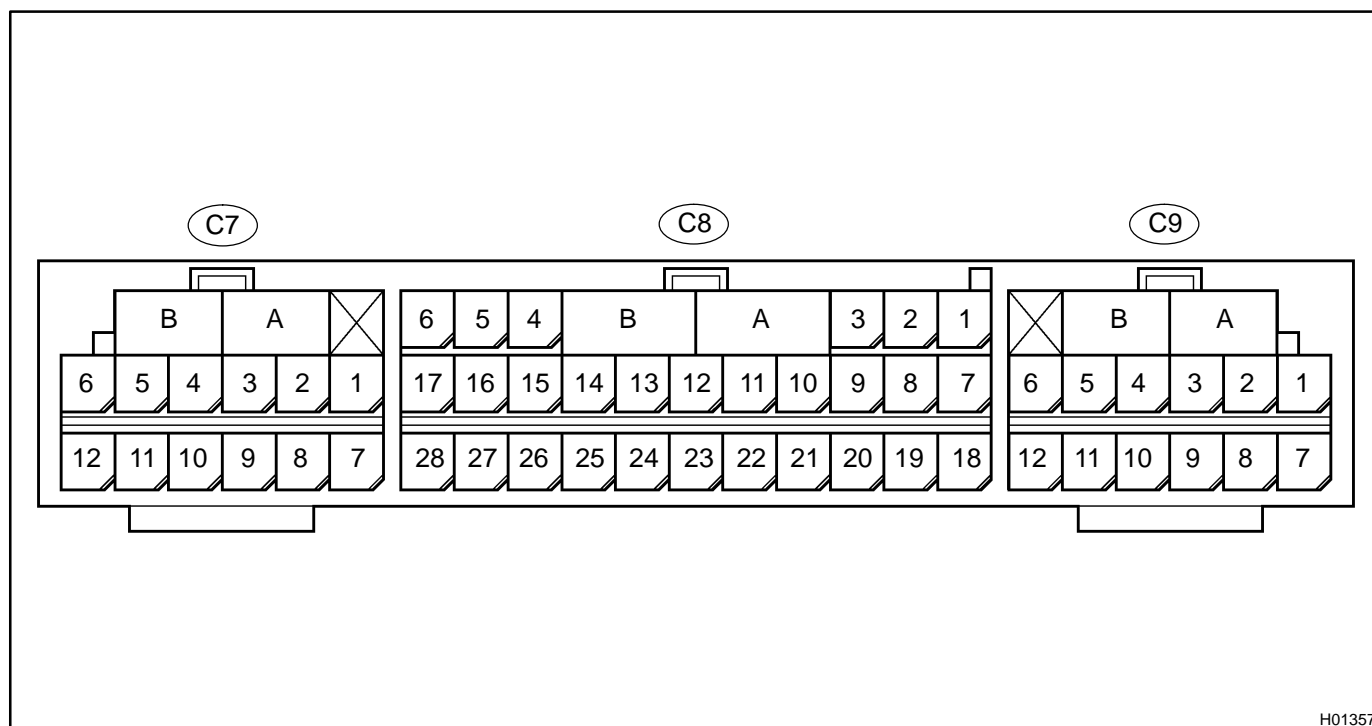

H01357

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C8 – 5	IG2	Power Source
C8 – 6	IG1	Power Source
C8 – 9	+SR	Front Airbag Sensor (RH)
C8 – 10	P+	Squib (Passenger)
C8 – 11	P–	Squib (Passenger)
C8 – 12	SIL	Diagnosis
C8 – 13	D–	Squib (Driver)
C8 – 14	D+	Squib (Driver)
C8 – 15	+SL	Front Airbag Sensor (LH)
C8 – 20	–SR	Front Airbag Sensor (RH)
C8 – 22	MPX2	Instrument Panel Integration ECU
C8 – 24	MPX1	Engine ECU
C8 – 26	–SL	Front Airbag Sensor (LH)
C8 – 27	E1	Ground
C8 – 28	E2	Ground
C7 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
C7 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
C7 – 3	ICL+	Squib (Curtain Shield Airbag Assembly (LH))
C7 – 4	ICL–	Squib (Curtain Shield Airbag Assembly (LH))
C7 – 5	SFL–	Squib (Side, LH)
C7 – 6	SFL+	Squib (Side, LH)
C7 – 7	VUPL	Side Airbag Sensor (LH)
C7 – 9	ESL	Side Airbag Sensor (LH)

DIAGNOSTICS – SUPPLEMENTAL RESTRAINT SYSTEM

No.	Symbol	Terminal Name
C7 – 10	SSL+	Side Airbag Sensor (LH)
C7 – 12	FSL	Side Airbag Sensor (LH)
C9 – 1	SFR+	Squib (Side, RH)
C9 – 2	SFR–	Squib (Side, RH)
C9 – 3	ICR–	Squib (Curtain Shield Airbag Assembly (RH))
C9 – 4	ICR+	Squib (Curtain Shield Airbag Assembly (RH))
C9 – 5	PR+	Squib (Pretensioner, RH)
C9 – 6	PR–	Squib (Pretensioner, RH)
C9 – 7	FSR	Side Airbag Sensor (RH)
C9 – 9	SSR+	Side Airbag Sensor (RH)
C9 – 10	ESR	Side Airbag Sensor (RH)
C9 – 12	VUPR	Side Airbag Sensor (RH)