


CIRCUIT INSPECTION

Sliding Roof Gear Assembly with ECU Circuit

WIRING DIAGRAM

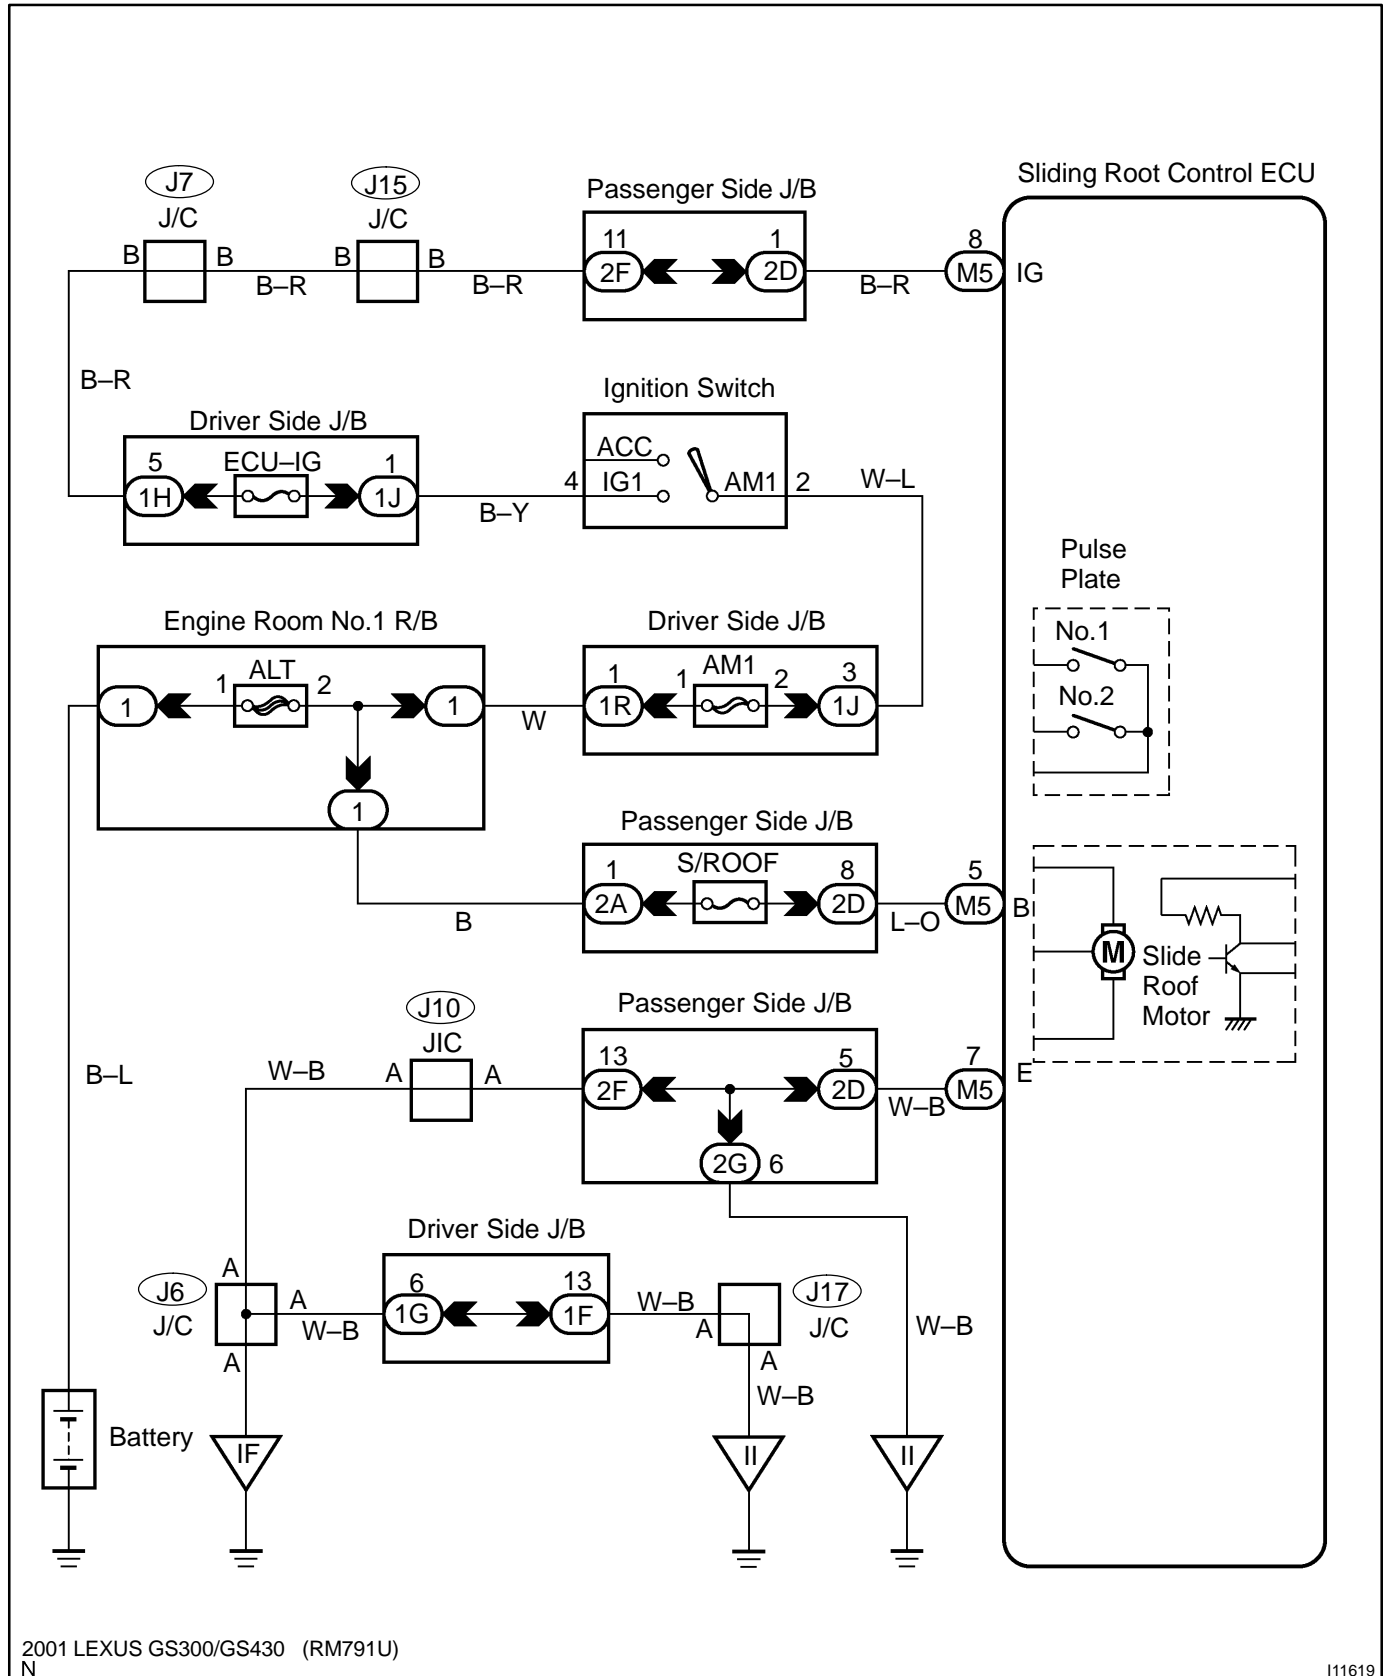

INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1	Perform active test.
---	----------------------

PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check that "Slide roof motor" operates as the LEXUS hand-held tester directs.

NOTICE:

Caution is necessary for a part of body not to be caught in as the jam protection system does not operate during conducting ACTIVE TEST.

HINT:

With one ACTIVE direction, the sliding roof can be slid and tilted continuously.

OK:

The slide roof operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page [DI-918](#)).

NG

Check sliding roof gear assembly.
(Mechanical function)