


## DISASSEMBLY

### 1. REMOVE VALVE LIFTERS AND SHIMS

HINT:

Arrange the valve lifters and shims in correct order.

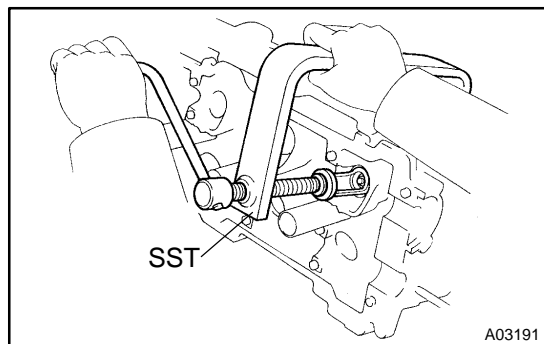

### 2. REMOVE VALVES

- (a) Using SST, compress the valve spring and remove the 2 keepers.


SST 09202-70020 (09202-00010)

- (b) Remove these parts:

- Remove the spring retainer.
- Remove the valve spring.
- Remove the valve.
- Remove the spring seat.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in correct order.

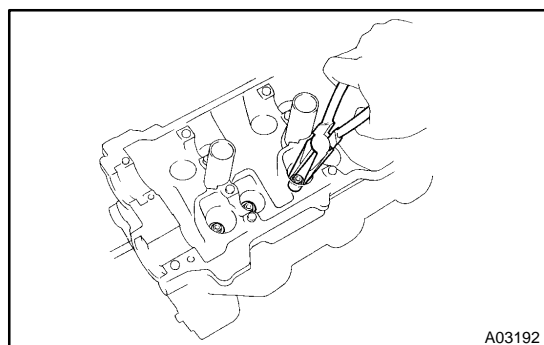

- (c) Using needle-nose pliers, remove the oil seal.