


## REMOVAL

1. REMOVE GENERATOR (See page [CH-6](#))
2. DISCONNECT CRANKSHAFT POSITION SENSOR CONNECTOR
  - (a) Disconnect the sensor connector.

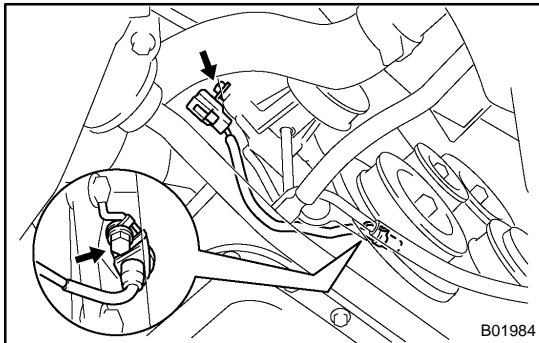

- (b) Remove the bolt holding the connector bracket to the water pump.
3. REMOVE CRANKSHAFT POSITION SENSOR
  - (a) Remove the bolt and crankshaft position sensor.  
**Torque: 9.0 N·m (90 kgf·cm, 80 in.-lbf)**
  - (b) Remove the connector bracket from the connector.