


REPLACEMENT

1. **REMOVE V-BANK COVER**
2. **REMOVE INTAKE AIR CONNECTOR PIPE**
3. **REMOVE IGNITION COILS**
 - (a) Disconnect the 8 ignition coil connectors.

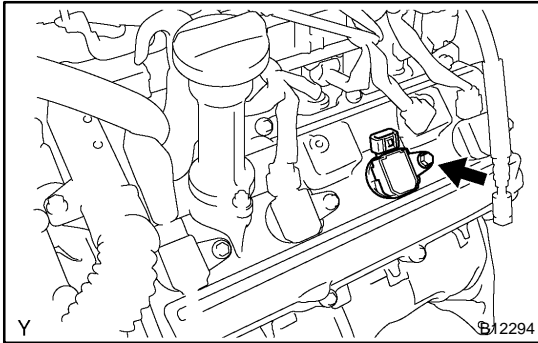

- (b) Remove the bolt, and pull out the ignition coil. Remove the 8 ignition coils.
4. **REINSTALL NEW IGNITION COILS**
 - (a) Connect a new ignition coil to the spark plug, and attach the ignition coil to the cylinder head cover, and install the bolt. Install the 8 ignition coils.
Torque: 7.5 N·m (80 kgf·cm, 66 in.-lbf)
 - (b) Connect the 8 ignition coil connectors.
5. **REINSTALL INTAKE AIR CONNECTOR PIPE**
6. **REINSTALL V-BANK COVER**