

## REMOVAL

### NOTICE:


Do not open the cover or the case of the ECU and various computers unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

### 1. REMOVE THESE PARTS:

(See page [BO-91](#))

- (a) Finish plate
- (b) End Pad
- (c) No.1 under cover
- (d) Hood lock release lever
- (e) No.1 safety pad
- (f) No.2 under cover
- (g) Glove compartment finish plate
- (h) Glove compartment panel assembly
- (i) Front ash receptacle
- (j) Cluster finish panel
- (k) Console box carpet
- (l) Accessory socket
- (m) Accessory case
- (n) Lower rear console box
- (o) Rear console armrest
- (p) Console box register
- (q) Console box
- (r) No.3 console box mounting bracket
- (s) No.1 console box duct

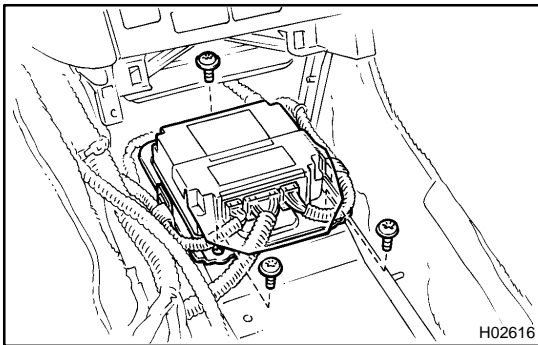

### 2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connectors.

### NOTICE:

Remove the connectors with the sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**