


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

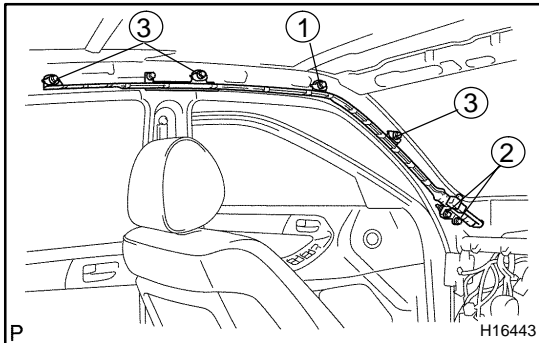

1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY

- (a) In order shown in the illustration, install the curtain shield airbag with the 7 bolts.

Torque: 9.8 N·m (100 kgf·cm, 86 in.-lbf)


CAUTION:

Pay due attention not to twist the deployment section of the curtain shield airbag assembly.

NOTICE:

- Make sure that the curtain shield airbag assembly is installed with the specified torque.
 - If the curtain shield airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the curtain shield airbag assembly with a new one.
 - When installing the curtain shield airbag assembly, take care it is not pinched between other parts.
- (b) Connect the connector of the curtain shield airbag assembly.

2. INSTALL INSTRUMENT PANEL (See page [BO-97](#))

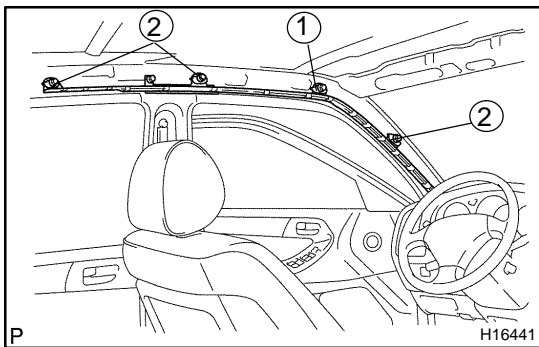

3. When inflator is installed:

INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY

In order shown in the illustration, install the deployment section of the curtain shield airbag assembly with the 5 bolts.

Torque: 9.8 N·m (100 kgf·cm, 86 in.-lbf)

CAUTION:

Pay due attention not to twist it.

NOTICE:

- Make sure that the curtain shield airbag assembly is installed with the specified torque.
 - When installing the curtain shield airbag assembly, take care it is not pinched between other parts.
- ### 4. INSTALL ROOF HEADLINING (See page [BO-105](#))