


## INSTALLATION

### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace with new parts.

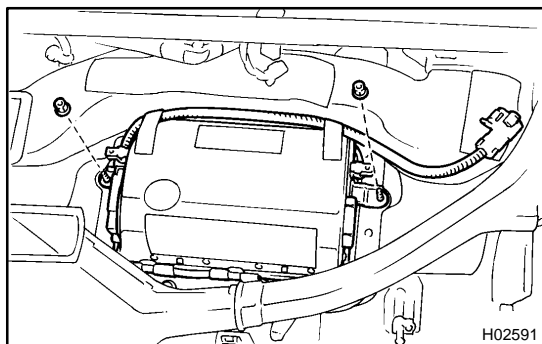


### 1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the front passenger airbag assembly with 2 nuts.  
Torque: 5.6 N·m ( 57 kgf·cm, 49 in.-lbf)

### NOTICE:


- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
- Install the straps so that they are not pinched between the airbag and instrument panel.

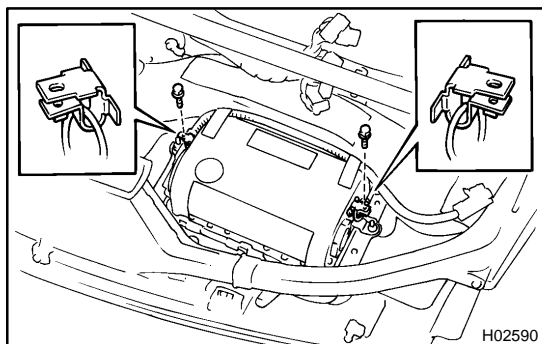

- (b) Install the 2 straps and 2 bolts.

### NOTICE:

- When installing the front passenger airbag assembly, make sure that the straps are not distorted and installed to the brackets securely.
- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

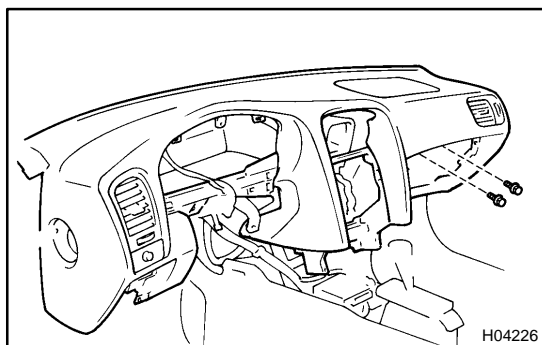

### 2. INSTALL INSTRUMENT PANEL

(See page [BO-97](#))

Install the 2 bolts to the instrument panel reinforcement.

Torque: 20 N·m (205 kgf·cm, 15 ft-lbf)

### 3. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.  
(b) Install the airbag connector to glove compartment door finish plate.  
(c) Install the glove compartment door finish plate.