


## INSTALLATION

### NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

### HINT:

For step 2 to 6, refer to page [RS-78](#).

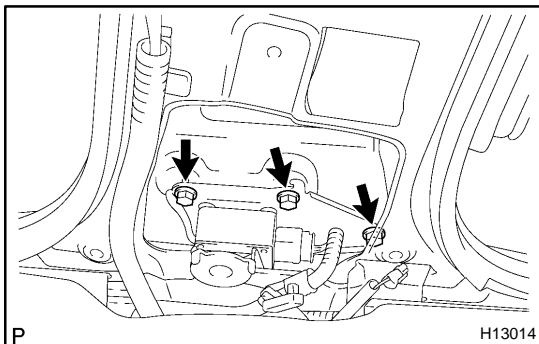

### 1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR

- (a) Install the side and curtain shield airbag assembly with 3 bolts.

**Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)**

- (b) Connect the connector.

### NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

### 2. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

**Torque:**

Upper bolt: 7.5 N·m (75 kgf·cm, 67 in.-lbf)

Lower bolt: 42 N·m (428 kgf·cm, 31 ft·lbf)

### 3. INSTALL CENTER PILLAR LOWER GARNISH

### 4. INSTALL FRONT DOOR SCUFF PLATE

### 5. INSTALL REAR DOOR SCUFF PLATE