


## INSPECTION

### INSPECT BALL JOINT FOR ROTATION CONDITION

- As shown, flip the ball joint stud back and forth 5 times, before installing the nut.
- Using torque wrench, turn the nut continuously one turn per 2–4 seconds and take the torque reading on the 5th turn.

#### Turning torque:

**0.1 – 3.0 N·m (1 – 30 kgf·cm, 0.9 – 26 in.-lbf)**

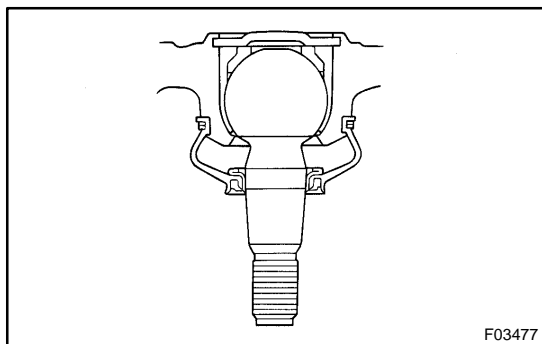

#### HINT:

Check for unusual resistance or looseness as you turn the torque wrench.