

REASSEMBLY

1. INSTALL HUB BEARING

- (a) Using SST and a press, install a new hub bearing to the axle carrier.


SST 09527-17011, 09950-60020 (09951-00810),
09950-70010 (09951-07100)

- (b) Using snap ring pliers, install the snap ring to the axle carrier.

2. INSTALL AXLE HUB


- (a) Install the backing plate with the 2 bolts and nuts.

Torque: 59 N·m (600 kgf-cm, 43 ft-lbf)

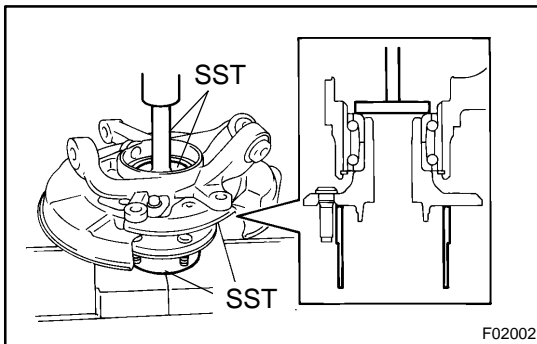

- (b) Using SST and a press, install the axle hub to the axle carrier.

SST 09527-17011, 09950-60010 (09551-00650),
09950-70010 (09951-07100)

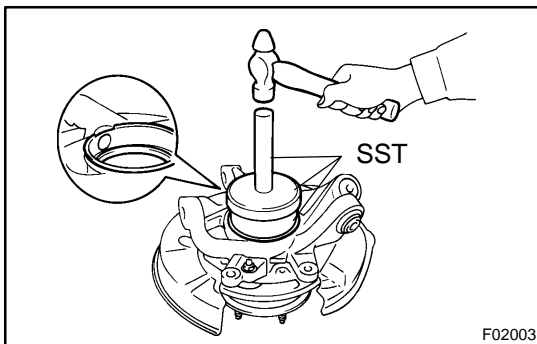

3. INSTALL DUST DEFLECTOR

Using SST and a hammer, install a new dust deflector to the axle carrier.

SST 09527-17011, 09950-60020 (09951-01030),
09950-70010 (09951-07100)

HINT:

Align the speed sensor installation hole of dust deflector and that of axle carrier.