


INSTALLATION

1. INSTALL CAMSHAFT TIMING OIL CONTROL VALE (BANK 1)

- Install a new O-ring to the oil control valve.
- Attach the oil control valve to the camshaft bearing cap.
- Install the oil control valve with the bolt.
Torque: 7.5 N·m (80 kgf·cm, 66 in.-lbf)
- Connect the oil control valve connector.
- Install the engine wire protector with the bolt.

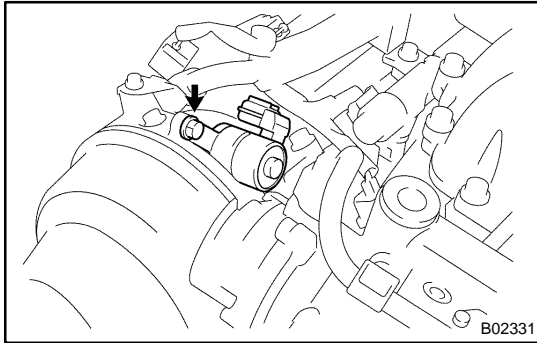

2. INSTALL CAMSHAFT TIMING OIL CONTROL VALE (BANK 2)

- Install a new O-ring to the oil control valve.
- Attach the oil control valve to the camshaft bearing cap.
- Install the oil control valve with the bolt.
Torque: 7.5 N·m (80 kgf·cm, 66 in.-lbf)
- Connect the oil control valve connector.

3. INSTALL THROTTLE BODY (See page [SF-40](#))

4. INSTALL INTAKE AIR CONNECTOR PIPE

5. INSTALL V-BANK COVER